



COMTRAXX® EDGE500

Condition Monitor with gateway functionality
for the integration and provision of Bender device data
Software version V5.x



Table of contents

| | | |
|----------|---|-----------|
| 1 | General information..... | 8 |
| 1.1 | How to use the manual..... | 8 |
| 1.2 | Indication of important instructions and information..... | 8 |
| 1.3 | Service and Support..... | 8 |
| 1.4 | Training courses and seminars..... | 8 |
| 1.5 | Delivery conditions..... | 8 |
| 1.6 | Inspection, transport and storage..... | 8 |
| 1.7 | Warranty and liability..... | 9 |
| 1.8 | Disposal of Bender devices..... | 9 |
| 1.9 | Safety..... | 9 |
| 2 | Product description..... | 10 |
| 2.1 | Scope of delivery..... | 10 |
| 2.2 | Device features..... | 11 |
| 2.3 | Scope of functions..... | 11 |
| 2.4 | Function modules..... | 11 |
| 2.4.1 | Subsequent installation of function modules..... | 11 |
| 2.4.2 | Function module A: Interfaces..... | 11 |
| 2.4.3 | Function module B: Basic functions..... | 12 |
| 2.4.4 | Function module C: Visualisation..... | 12 |
| 2.5 | Applications..... | 12 |
| 2.6 | Function..... | 13 |
| 2.7 | Functional description..... | 13 |
| 2.7.1 | Interfaces..... | 13 |
| 2.7.2 | System image..... | 14 |
| 2.7.3 | BMS interface..... | 14 |
| 2.7.4 | Address setting and termination..... | 14 |
| 3 | Mounting, connection and commissioning..... | 15 |
| 3.1 | Preparation..... | 15 |
| 3.2 | Installation and connection..... | 16 |
| 3.2.1 | Mounting the device..... | 16 |
| 3.2.2 | Connecting the device..... | 17 |
| 3.2.3 | Digital inputs..... | 19 |
| 3.2.4 | Relays..... | 20 |
| 3.2.5 | Connection diagram..... | 20 |
| 3.3 | Display and control elements..... | 21 |

| | | |
|----------|---|-----------|
| 3.4 | Commissioning the device..... | 21 |
| 3.5 | Factory settings for addresses..... | 22 |
| 4 | Web user interface..... | 23 |
| 4.1 | Functions of the web user interface..... | 23 |
| 4.2 | Software products used..... | 23 |
| 4.3 | Browser configuration..... | 24 |
| 4.4 | Home page COMTRAXX® user interface..... | 24 |
| 4.4.1 | Headline..... | 24 |
| 4.4.2 | Path display (breadcrumb navigation)..... | 24 |
| 4.4.3 | Navigation..... | 25 |
| 4.4.4 | Subnavigation..... | 25 |
| 4.4.5 | Content area..... | 26 |
| 4.4.6 | Overview of pending alarms..... | 26 |
| 4.5 | Setting up password protection for EDGE500..... | 26 |
| 4.6 | Making settings on the device..... | 26 |
| 4.6.1 | Digital inputs..... | 27 |
| 4.6.2 | Relay..... | 27 |
| 4.6.3 | Interface..... | 28 |
| 4.6.4 | Edit texts..... | 28 |
| 4.6.5 | E-mail..... | 29 |
| 4.6.6 | History/Logger..... | 30 |
| 4.6.7 | Clock..... | 30 |
| 4.6.8 | Security..... | 30 |
| 4.6.9 | Factory settings..... | 31 |
| 4.6.10 | Software update..... | 31 |
| 4.7 | Device failure monitoring..... | 31 |
| 5 | Visualisation..... | 33 |
| 5.1 | The headline..... | 33 |
| 5.1.1 | Drop-down menu "File"..... | 33 |
| 5.1.2 | Grouping functions..... | 34 |
| 5.1.3 | Undo/Redo..... | 34 |
| 5.1.4 | Project name..... | 34 |
| 5.1.5 | Language selection..... | 34 |
| 5.1.6 | Simulating visualisation..... | 35 |
| 5.2 | The "work area"..... | 35 |
| 5.3 | Dashboards..... | 35 |
| 5.4 | Widget library..... | 36 |

| | | |
|----------|---|-----------|
| 5.4.1 | Widget list..... | 36 |
| 5.4.2 | Placing widgets in the work area..... | 40 |
| 5.5 | Settings..... | 40 |
| 5.5.1 | Project settings..... | 41 |
| 5.5.2 | Widget settings..... | 42 |
| 5.6 | Widget alignment..... | 51 |
| 5.7 | Guides and grid..... | 51 |
| 5.7.1 | Guides..... | 51 |
| 5.7.2 | Grid..... | 51 |
| 5.8 | Used widgets..... | 52 |
| 6 | Virtual devices..... | 53 |
| 6.1 | Application possibilities..... | 53 |
| 6.2 | Managing virtual devices..... | 53 |
| 6.2.1 | Virtual devices: Overview list/Main page..... | 53 |
| 6.2.2 | Editing a virtual device..... | 54 |
| 6.2.3 | Editing channels..... | 54 |
| 6.2.4 | Deleting a device..... | 54 |
| 6.2.5 | Adding a virtual device..... | 54 |
| 7 | Modbus TCP server..... | 56 |
| 7.1 | Modbus requests..... | 56 |
| 7.1.1 | Example for function code 0x03..... | 56 |
| 7.1.2 | Example for function code 0x04..... | 57 |
| 7.1.3 | Example for function code 0x10..... | 57 |
| 7.2 | Modbus responses..... | 58 |
| 7.2.1 | Responses for function code 0x03 and 0x04..... | 58 |
| 7.2.2 | Responses for function code 0x10..... | 58 |
| 7.2.3 | Exception code..... | 59 |
| 7.3 | Modbus system image..... | 59 |
| 7.4 | Bender Modbus image V1..... | 60 |
| 7.4.1 | Querying data with Modbus function code 0x03..... | 60 |
| 7.4.2 | Querying data with Modbus function code 0x04..... | 61 |
| 7.4.3 | Writing data with Modbus function code 0x10..... | 61 |
| 7.4.4 | Distribution of the memory areas..... | 61 |
| 7.4.5 | Memory scheme of the system image..... | 61 |
| 7.4.6 | Memory scheme of an individual device..... | 62 |
| 7.4.7 | Example: Determine start address..... | 62 |
| 7.4.8 | Data formats..... | 63 |

| | | |
|-----------|---|-----------|
| 7.4.9 | Modbus example for reading data (V1)..... | 67 |
| 7.4.10 | Reference data records of the process image..... | 68 |
| 7.4.11 | Address assignment of the reference data record..... | 68 |
| 7.4.12 | Reference value on channel 1..... | 69 |
| 7.4.13 | Reference value on channel 2..... | 69 |
| 7.4.14 | Explanation of how to access floating point values..... | 69 |
| 7.5 | Bender Modbus image V2..... | 70 |
| 7.5.1 | Function codes (V2)..... | 70 |
| 7.5.2 | Distribution of the memory areas (V2)..... | 71 |
| 7.5.3 | Memory scheme of the system image (V2)..... | 72 |
| 7.5.4 | Memory scheme of a device (V2)..... | 72 |
| 7.5.5 | Modbus example for reading data (V2)..... | 75 |
| 7.5.6 | Reference data records of the system image (V2)..... | 75 |
| 7.6 | Channel descriptions for the process image (V1 and V2)..... | 76 |
| 7.7 | Modbus control commands..... | 87 |
| 7.7.1 | Writing to registers..... | 87 |
| 7.7.2 | Reading registers..... | 87 |
| 7.7.3 | Control commands for the BMS bus..... | 87 |
| 7.7.4 | Modbus example for control commands..... | 88 |
| 8 | Modbus RTU Slave..... | 89 |
| 9 | SNMP..... | 90 |
| 9.1 | Data access using SNMP..... | 90 |
| 9.2 | Device assignment for SNMP..... | 90 |
| 10 | MQTT..... | 91 |
| 10.1 | Data access via MQTT..... | 91 |
| 10.2 | Measured value assignment for MQTT..... | 91 |
| 10.3 | Connection settings..... | 91 |
| 11 | Troubleshooting..... | 93 |
| 11.1 | Malfunctions..... | 93 |
| 11.1.1 | What should be checked?..... | 93 |
| 11.1.2 | Frequently asked questions..... | 93 |
| 11.2 | Maintenance, Cleaning..... | 93 |
| 12 | Technical data..... | 94 |
| 12.1 | Tabular data..... | 94 |
| 12.2 | Standards, approvals and certifications..... | 100 |
| 12.3 | Ordering information..... | 101 |

12.4 Document revision history..... 101

1 General information

1.1 How to use the manual



NOTE

This manual is intended for qualified personnel working in electrical engineering and electronics! Part of the device documentation in addition to this manual is the enclosed supplement "Safety instructions for Bender products".



NOTE

Read the operating manual before mounting, connecting and commissioning the device. Keep the manual within easy reach for future reference.

1.2 Indication of important instructions and information



DANGER

Indicates a high risk of danger that will result in death or serious injury if not avoided.



WARNING

Indicates a medium risk of danger that can lead to death or serious injury if not avoided.



CAUTION

Indicates a low-level risk that can result in minor or moderate injury or damage to property if not avoided.



NOTE

Indicates important facts that do not result in immediate injuries. They can lead to malfunctions if the device is handled incorrectly.



Information can help to optimise the use of the product.

1.3 Service and Support

Information and contact details about customer service, repair service or field service for Bender devices are available on the following website: www.bender.de/en/ > [Service & Support](#).

1.4 Training courses and seminars

Regular face-to-face or online seminars for customers and other interested parties:

www.bender.de/en/ > [Know-How](#) > [Seminars](#)

1.5 Delivery conditions

The conditions of sale and delivery set out by Bender GmbH & Co. KG apply. These can be obtained in printed or electronic format.

1.6 Inspection, transport and storage

Check the shipping and device packaging for transport damage and scope of delivery. In the event of complaints, the company must be notified immediately, see www.bender.de/en/ > [Service & Support](#).

When storing the devices, observe the information under Environment / EMC in the technical data.

1.7 Warranty and liability

Warranty and liability claims for personal injury and property damage are excluded in the case of:

- improper use of the device
- incorrect mounting, commissioning, operation and maintenance of the device
- Failure to observe the instructions in this operating manual regarding transport, commissioning, operation and maintenance of the device
- unauthorised changes to the device made by parties other than the manufacturer
- non-observance of technical data
- Repairs carried out incorrectly
- the use of accessories or spare parts that are not provided, approved or recommended by the manufacturer
- Catastrophes caused by external influences and force majeure
- Mounting and installation with device combinations not approved or recommended by the manufacturer

This operating manual and the enclosed safety instructions must be observed by all persons working with the device. Furthermore, the rules and regulations that apply for accident prevention at the place of use must be observed.

1.8 Disposal of Bender devices

Abide by the national regulations and laws governing the disposal of this device.



Bender GmbH & Co. KG is registered in the waste from electrical and electronic equipment (WEEE) register under the WEEE number: DE 43 124 402. For more information on the disposal of Bender devices, refer to [Bender.de/en/ > Service & Support](https://www.bender.de/en/>Service%20%26%20Support).

1.9 Safety

If the device is used outside the Federal Republic of Germany, the applicable local standards and regulations must be complied with. In Europe, the European standard EN 50110 applies.



DANGER

Risk of fatal injury due to electric shock!

Touching live parts of the system carries the risk of:

- *Risk of electrocution due to electric shock*
- *Damage to the electrical installation*
- *Destruction of the device*

Before installing the device and before working on its connections, make sure that the installation has been de-energised. The rules for working on electrical systems must be observed.

2 Product description

This manual describes

- The COMTRAXX® **EDGE500IP** condition monitor with gateway functionality

The COMTRAXX® EDGE500 series includes a condition monitor with integrated gateway and is integrated into the existing IT structure like any Ethernet-capable device. All Bender devices can be connected via the integrated interfaces. In addition, third-party devices can also be integrated into the system. The measured values, parameters and all other data can be checked, analysed and parameterised via the web interface. Alarms can be reported and visualised. The visualisation application can be used to generate individual overview pages, which are then displayed in a web browser.

Intended use

The EDGE500 converts alarms, measured values and states of the devices into Modbus TCP, Modbus RTU, SNMP, , MQTT and HTTP / HTTPS. This enables connection to customer networks as well as visualisation and evaluation with standard web browsers.

It is operated and configured using the web user interface integrated into the device.

Interfaces for acquiring device data

- BCOM
- BMS (intern)
- Modbus RTU
- Modbus TCP

Interfaces for providing device data

- Modbus RTU
- Modbus TCP
-
- SNMP
- MQTT

The device must always be adapted to the systems and operating conditions on site by means of individual parameterisation in order to meet the requirements of the standards.

Please observe the limits of the application range specified in the technical data. Any other use or use beyond that specified is considered improper.

2.1 Scope of delivery

Included within the scope of delivery

- A condition monitor EDGE500...
- Connector plugs
- A printed quick-start guide
- Safety instructions for Bender products
- The manuals are available as PDF files for download at <https://www.bender.de/en/service-support/download-area/>
- The **configuration file for SNMP** "*comtraxx_mibs.zip*"
The current file is stored on the EDGE500... as a download:
EDGE500... > Menu > Settings > Interface > SNMP > General



*Only registered users can download software.
Please register with your e-mail address.*

2.2 Device features

- Condition monitor for Bender systems
- Integrated modular gateway between Bender systems and TCP/IP enables remote access via LAN, WAN or Internet
- Range of functions adjustable through function modules
- Support of devices that are connected to the internal BMS bus, via BCOM, via Modbus RTU or Modbus TCP
- Individual visualisation can be generated, which is displayed via the web browser

2.3 Scope of functions

Basic device (without function modules)

- Condition monitor with web interface
- Interfaces for the integration of devices
 - Internal BMS bus (max. 150 devices)
 - BCOM (max. 255 devices)
 - Modbus RTU and Modbus TCP (max. 247 devices each)
- Gateway to Modbus TCP: Reading the latest measured values, status/alarm messages from addresses 1...5 of the respective interface via Modbus TCP
- Gateway to Modbus RTU: Reading the latest measured values, status/alarm messages from addresses 1...5 of the internal BMS interface via Modbus RTU
- 3 Ethernet interfaces with 10 Mbit/s | 100 Mbit/s | 1 Gbit/s for remote access via LAN, WAN or Internet
- Parameterisation of the individual EDGE500... device parameters
- Time synchronisation for all assigned devices
- 10 data points from third-party devices (via Modbus RTU or Modbus TCP) can be integrated into the system
- 8 digital inputs
- 3 relay outputs


2.4 Function modules

2.4.1 Subsequent installation of function modules

Download the licence files from the Bender homepage.

<https://www.bender.de/en/service-support/licences>

Then activate the function modules in the COMTRAXX® web view:

 **Tools > Service > Function modules**

The button for importing the licence files (.blf) is located below the overview.

2.4.2 Function module A: Interfaces

- Reading the latest measured values, status and alarm messages from all assigned devices. Uniform access to all assigned devices via Modbus TCP over integrated server.
- Reading the latest measured values, status and alarm messages from all assigned devices via internal BMS. Uniform access to all assigned devices via Modbus RTU.

- Control commands: From an external application (e.g. visualisation software or PLC), commands can be sent to BMS devices via Modbus TCP or Modbus RTU.
- Access to alarms and measured values via SNMP (V1, V2c or V3). SNMP traps are supported.
- Alarms and measured values are provided via MQTT.
- 2000 data points from third-party devices (Modbus RTU or Modbus TCP) can be integrated into the system.

2.4.3 Function module B: Basic functions

- Display of current measured values, operating/alarm messages and parameters in the system overview
- History memory (20,000 entries)
- Data logger, freely parameterisable (30 x 10,000 entries)
- Creating 100 virtual devices with 16 channels
- Assignment of individual texts for devices, channels (measuring points) and alarms
- Device failure monitoring
- E-mail notification of alarms and system errors to different users
- Creation of device documentation for each device in the system including all parameters and measured values associated with the device, as well as device information such as serial number and software version.
- Creation of system documentation of all devices in the system at once.
- Quick and easy parameterisation of all devices assigned to the gateway using a web browser.
- Creating and restoring device backups for all devices in the system.

2.4.4 Function module C: Visualisation

- Quick and easy-to-create visualisation of the system. Integrated editor provides access to a variety of widgets and functions.
- Display on up to 50 overview pages on which, for example, room plans can be stored. Navigation within these overview pages is possible.
- Access to all measured values available in the system.
- Buttons and sliders can be used to send test and reset commands and to control external devices via Modbus TCP.

2.5 Applications

- Optimum display and visualisation of device and plant statuses
- Monitoring and analysing Bender devices and compatible third-party devices
- Customised system overview thanks to a wide range of options
- Selective notification to various users in the event of alarms
- Use of professional visualisation programs through conversion to the Modbus TCP, Modbus RTU, SNMP and MQTT protocols
- Clear setting of device parameters. It is possible to save, document and restore parameters
- Commissioning and diagnosis of Bender systems
- Remote diagnosis, remote maintenance

2.6 Function


The EDGE500 are integrated into the existing IT structure in the same way as PCs. After connection to the network and compatible Bender products, all devices in the system can be accessed from any PC via a web browser. This means that all important system information is directly available. The software is compatible with all standard web browsers.

2.7 Functional description

2.7.1 Interfaces

EDGE500 communicates with the assigned devices and systems via various interfaces:

- Internal BMS bus (RS-485) for Bender systems such as ISOSCAN® EDS150, LINETRAXX® RCMS460-D or ATICS®. EDGE500 can be operated as a master or as a slave. When operated as a master, requests are answered more quickly.
- BCOM (Ethernet) for Bender systems with Ethernet communication such as ISOMETER® iso685-D
- Modbus RTU (RS-485) for Bender devices such as LINETRAXX® SmartDetect RCMS410
- Modbus TCP (Ethernet) for Bender devices such as LINETRAXX® PEM353

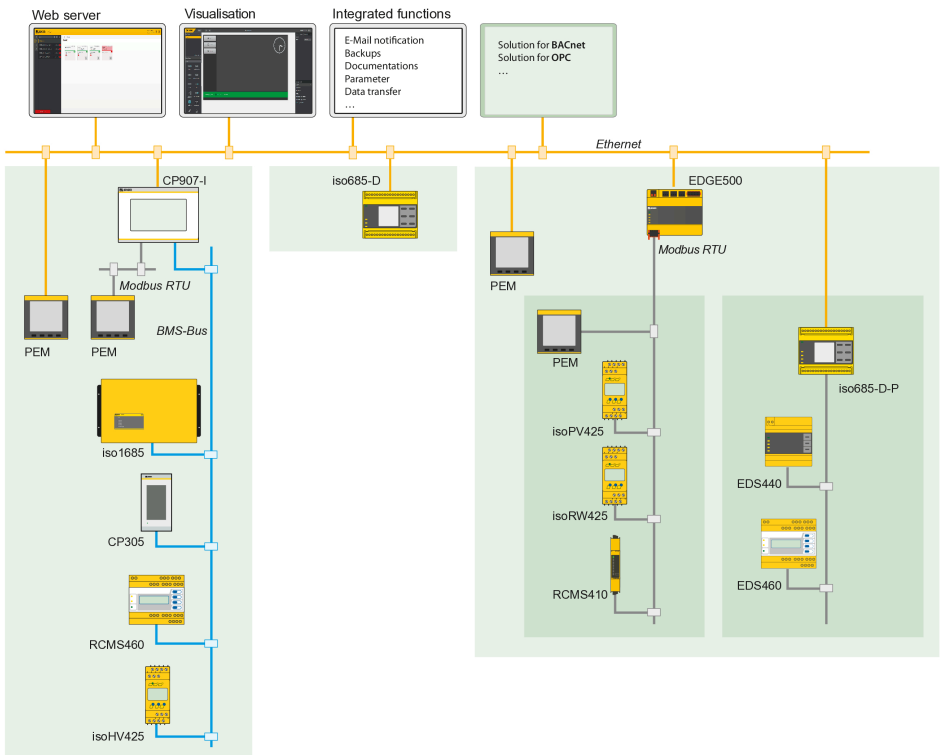

Img. 2-1: Block diagram

2.7.2 System image

The EDGE500 creates and saves a system image from the communication with the assigned devices. This system image contains all alarms, status information and measured values of the assigned devices. The EDGE500 combines the information from the different interfaces and makes it available

- for display and configuration via the web interface
- for display and operation via the visualisation
- for transmission to external systems using Modbus TCP, Modbus RTU, SNMP and MQTT

The EDGE500 provides a common user interface for the devices assigned via different interfaces. On this user interface, each device is given an individual address by which it can be identified. BMS, BCOM and Modbus RTU devices receive the appropriate address for their interface. A virtual address is assigned to Modbus TCP devices so that they can be addressed correctly in the system.

2.7.3 BMS interface

BMS bus (Internal)

The majority of Bender devices communicate via the internal BMS bus. Details can be found in the BMS manual (D00276).

The EDGE500 can be operated as a master (address 1) or as a slave.



The EDGE500 is to be operated as a master if:

- Parameters are queried or changed
- Control commands are issued

Note that not all BMS masters can surrender their master function!

2.7.4 Address setting and termination

For proper functioning of the EDGE500, correct address assignment and termination is of utmost importance.



CAUTION

Malfunction due to duplicated addresses!

Assigning addresses that are already used by existing devices in the bus systems concerned may cause serious malfunctions.

Make sure the EDGE500 is correctly addressed and terminated.



Risk of duplicate addresses if BCOM system name is not changed.

The factory setting for the system name on all Bender BCOM devices is "SYSTEM". If several systems are established in the same network, there is a risk that addresses will be assigned more than once.

*Therefore, always give **each system a new BCOM system name** during commissioning.*

3 Mounting, connection and commissioning

TheEDGE500 is normally integrated into existing LAN structures, but can also be operated via a single PC on the Ethernet side.



CAUTION

*If you are familiar with the configuration of computer networks, you can carry out the connection of the EDGE500 yourself. **Otherwise please contact your EDP administrator!***

3.1 Preparation



For initial connection, a basic configuration of the EDGE500 is to be undertaken outside the installation, depending on the specific situation.

1. Have all the questions concerning the installation been discussed with the technician responsible for the installation?
2. Are the settings of the BCOM interface known? System name, subsystem address and device address must be configured.
3. Is the BMS address to be set known? Can EDGE500 be operated as the master (BMS address 1)?

For more detailed information on the topic of BMS, in particular about the wiring of bus devices, please refer to the separate document "BMS bus". You can obtain this document at <https://www.bender.de/en/service-support/download-area/>

4. Modbus RTU: Determine and set baud rate and parity (if the interface is used).
5. Does the computer network have a DHCP server?
If the connected computer network contains a DHCP server, activate the "DHCP" function. The IP address is automatically assigned and displayed. If the computer network does not include a DHCP server, the IP address, network mask (SN) and standard gateway must be specified by the EDP administrator. The IP address has been permanently assigned to the device. Therefore, deactivate the "DHCP" function on the gateway.
6. Ask for the IP address of the NTP server; it is required for the automatic time setting.
7. Are suitable PC hardware and software available for commissioning (PC, tablet, mobile phone with current web browser)?

3.2 Installation and connection



Only skilled persons are permitted to carry out the work necessary to install, put into service and run a device or system.



DANGER

Risk of fatal injury due to electric shock!

Touching live parts of the system carries the risk of:

- Risk of electrocution due to electric shock
- Damage to the electrical installation
- Destruction of the device

Before installing and connecting the device, make sure that the installation has been de-energised. The rules for working on electrical systems must be observed.



DANGER

Mortal danger and risk of irreparable damage due to moisture!

Install device such that it is protected against moisture.



CAUTION


Pay attention to installation location

Operation of the device is only permitted in operating locations with **restricted access!** This can be installation in a switch cabinet, for example.


3.2.1 Mounting the device

The device is suitable for the following types of installation:


- Snap-on mounting on a DIN rail according to IEC 60715 or
- Screw mounting using 3 x M4

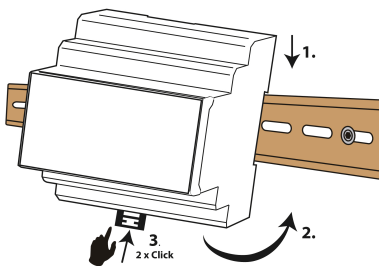

Snap-on mounting on a DIN rail according to IEC 60715

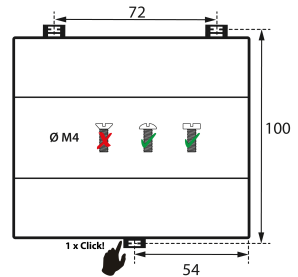


Screw mounting using 3 x M4

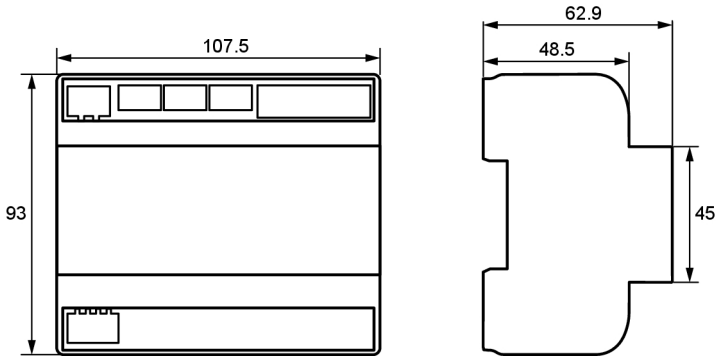Dimension diagram (mm)

3.2.2 Connecting the device

For UL applications, the following must be observed:

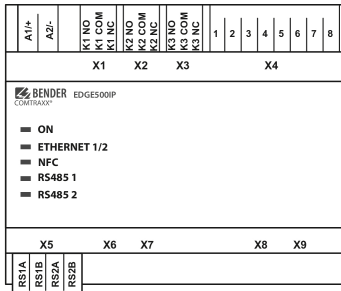- Maximum ambient temperature: 55 °C
- Use 60/75°C copper lines only



| Element | Explanation | Clamp |
|------------|-----------------|--------------------------|
| A1/+; A2/- | Power supply | |
| Plug X1 | Relay output K1 | K1 NO K1 COM K1 NC |
| Plug X2 | Relay output K2 | K2 NO K2 COM K2 NC |
| Plug X3 | Relay output K3 | K3 NO K3 COM K3 NC |

| Element | Explanation | Clamp |
|----------------|----------------------|------------------------------|
| Plug X4 | Digital inputs | IN1...8 |
| Plug X5 | RS-485 interfaces | RS1A RS1B RS2A RS2B |
| Plug X6 | Ethernet interface 1 | ETH1 |
| Plug X7 | Ethernet interface 2 | ETH2 |
| Plug X8 | USB-C interface 1 | USB1 |
| Plug X9 | USB-C interface 2 | USB2 |


Make the connection as follows:

1. BMS bus connection
Connect the terminals **RS2A** and **RS2B** to the BMS bus (A to A, B to B). If the EDGE500 is located at one end of the BMS bus, you must switch on the termination in the COMTRAXX® menu.
2. Modbus RTU connection
Connect the terminals **RS1A** and **RS1B** to the Modbus RTU (A to A, B to B). If the EDGE500 is located at one end of the bus, you must switch on the termination in the COMTRAXX® menu.
3. Ethernet connection ((BCOM, Modbus TCP, SNMP, MQTT)
Both interfaces can be configured individually. Plug the Ethernet cable (RJ45) into ETH1 or ETH2 of the EDGE500. The device can then be integrated into a network. A shielded Ethernet cable of category 5 (Cat. 5) or better must be used.
4. Relay output connection

i $K...NO + K...COM > N/O$ principle
 $K...NC + K...COM > N/C$ principle
5. Connection of digital inputs
6. Connect power supply
Connect terminals A1/+ and A2/- to a power supply.

3.2.3 Digital inputs

EDGE500-devices have 8 parameterisable digital inputs. The settings are made via the COMTRAXX® user interface in a browser (see chapter "Digital inputs", Page 27).

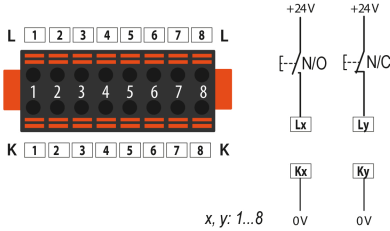


Menu > Settings > Digital Input 1 - 8

The following functions can be defined to the digital inputs IN1...8:

| Parameter | Options/Setting range | |
|------------------|--|------------------|
| Mode | High-active Low-active Impuls (High-active) Impuls (Low-active) | |
| Measurement type | Operating message Alarm Error(s) | |
| t_{on} | Response delay | 0 s...10 minutes |
| t_{off} | Switch-off delay | |


An event is executed when the digital input experiences an edge change. The edge change must be present at least for the set response delay t_{on} , otherwise it is ignored.

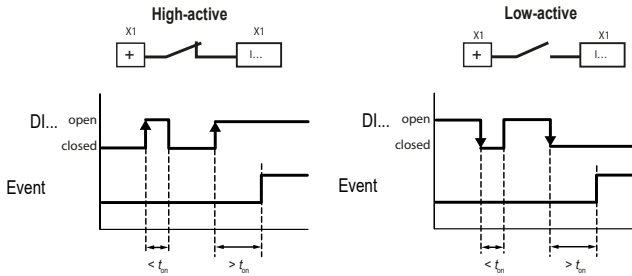

3.2.4 Relays

EDGE500 has three relays (changeover contacts).


Relay wiring

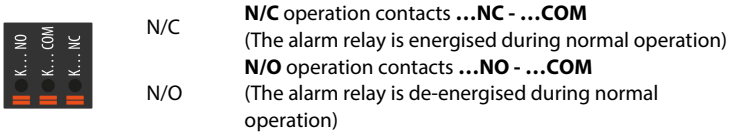

The three relays are parameterised in the device menu (see chapter “Relay”, Page 27).

3.2.5 Connection diagram

Connection diagram EDGE500 (Example)

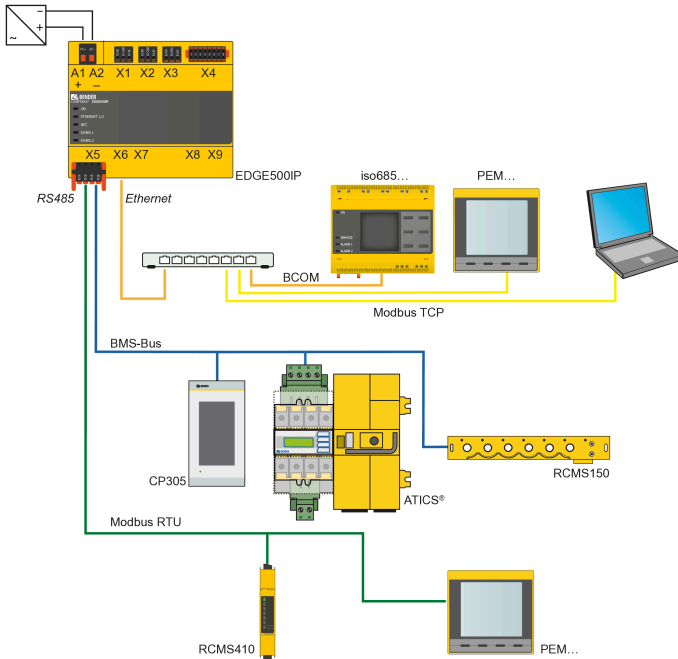

3.3 Display and control elements

| | | | | | | | | | | | | | | | | | | | | | | | | |
|--|------|-------|--------|-------|-------|--------|-------|-------|--------|-------|---|---|---|---|----|---|---|---|--|----|--|--|--|--|
| A1+ | A2- | K1 NO | K1 COM | K1 NC | K2 NO | K2 COM | K2 NC | K3 NO | K3 COM | K3 NC | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | | | | | |
| | | X1 | | X2 | | X3 | | X4 | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | |
| BENDER COMTRAXX® EDGE500P ■ ON ■ ETHERNET 1/2 ■ NFC ■ RS485 1 ■ RS485 2 | | | | | | | | | | | | | | | | | | | | | | | | |
| X5 | | | | | X6 | | | | | X7 | | | | | X8 | | | | | X9 | | | | |
| RS1A | RS1B | RS2A | RS2B | | | | | | | | | | | | | | | | | | | | | |



| LED | Funktion |
|--------------|--|
| ON | "ON" LED: Flashes during the start process. The LED lights continuously as soon as the device is ready for operation. |
| ETHERNET 1/2 | LEDs indicate activity on the various interfaces. <i>Note: NFC in preparation</i> |
| NFC | |
| RS485 1 | |
| RS485 2 | |

3.4 Commissioning the device

1. Switch on the supply voltage:

When the device is supplied with power, all LEDs light up briefly. During the start process the "ON" LED flashes. After a successful start, the "ON" LED then illuminates continuously. The device is now ready for operation.



*The EDGE500 has 2 Ethernet interfaces (ETH1 and ETH2). Please note that **only ETH1 is BCOM-capable and can be used to integrate Bender devices into the network.** ETH2 connects the customer network, for example the building management system, to the network.*

2. Start web user interface:

- Open a web browser.
- Type the following IP address to open the web interface of the EDGE500 :

ETH1:

If your PC is in a 192.168.0.0 IT subnet, you can reach the via the factory-set IP address 192.168.0.254.

ETH1|ETH2:

If your PC is in a different subnet, you must disconnect the PC from your network. Connect the directly to your PC. Open the web user interface using the second pre-defined IP address:

ETH1: 169.254.0.1 | **ETH2:** 169.254.0.2

For this purpose, DHCP must be enabled on the PC.

In the web user interface, the IP address of the can be set as required.

3. Configure:
As a minimum, configure all address parameters for the EDGE500.
4. **ETH1** only:
Always configure the BCOM interface (system name, subsystem, device address).




Risk of duplicate addresses if BCOM system name is not changed.

The factory setting for the system name on all Bender BCOM devices is "SYSTEM". If several systems are established in the same network, there is a risk that addresses will be assigned more than once.

Therefore, always give each system a new BCOM system name during commissioning.

If several EDGE500 are to communicate in one system, the system name must be selected uniformly and only the subsystem address must be separated.

5. Integrate devices into the system:
 - **ETH1** only:
BCOM devices are detected automatically
 - **ETH1|ETH2:**
Modbus devices need to be configured. This is done in the web interface at
 **> Device management > Modbus devices > Manage devices**
6. Check connection
Connect the EDGE500 to the network again. Start the web user interface. All other settings (individual texts, e-mail notifications, ...) can now be made.

3.5 Factory settings for addresses

The EDGE500 is supplied with the following factory settings:

| Parameter | Factory setting | |
|--|-----------------|-------------|
| | ETH1 | ETH2 |
| IP address | 192.168.0.254 | 10.0.0.254 |
| Second fixed IP address (e.g. for commissioning) | 169.254.0.1 | 169.254.0.2 |
| Net mask | 255.255.0.0 | 255.0.0.0 |
| Standard gateway | 192.168.0.1 | 10.0.0.1 |
| DNS | 192.168.0.1 | 10.0.0.1 |
| DHCP | off | off |
| t _{off} (Timeout for DHCP address assignment) | 30 s | 30 s |
| BMS address | 1 | - |
| BCOM system name | SYSTEM | - |
| Subsystem address | 1 | - |
| BCOM device address | 0 (= off) | - |

The settings can be changed using the web user interface.

4 Web user interface

The web user interface of the device enables access via LAN, WLAN or the Internet. It provides a uniform display of Bender devices that are connected to:

- The internal BMS bus
- BCOM
- Modbus RTU
- Modbus TCP

Each interface has its own address range. Each device is given its own individual address by which it can be identified.

4.1 Functions of the web user interface

- Bus overview of the associated devices
 - Indicating alarms and measured values
 - Display by interface or subsystem
 - Setting, displaying and evaluating the history memory and data loggers
 - Graphical display of measured values
 - Setting device parameters
 - Device failure monitoring
 - Saving settings as "backup" and restoring values again
 - Documenting settings and measured values
 - Assigning individual texts for devices, measuring points (channels) and alarms
 - E-mail notifications to different user groups according to a time-controlled schedule in the event of alarms and system errors. The sender's e-mail address can be entered.
 - Display of virtual devices. A virtual "measuring point" is obtained by logically or numerically evaluating measured values of "real" devices connected to the gateway.
- Management of Modbus devices
 - Adding/deleting devices to/from the bus overview
 - Creating a template with selected measured values
- Visualisation
 - Fast, simple visualisation can be configured in its own editor without programming knowledge
 - Measured values, alarms, buttons, etc. can be arranged and displayed in front of a graphic (system diagram, room plan) using various widgets
 - Multiple dashboards configurable. Navigation between these is possible
- From an external application (e.g. visualisation software), commands can be sent to BMS devices. The "Modbus control commands" menu provides Modbus control commands for selected BMS commands.
- Graphical display with scaling of the time axis for the data loggers of the gateway and compatible Bender devices.

4.2 Software products used

Select  **Tools > Information > Software information**, to display the used software products.


4.3 Browser configuration

The latest version of all common standard browsers can be used.

To use the functions of the web user interface, JavaScript has to be activated. The pop-up blocker should be deactivated for the IP address of the COMTRAXX® device.

4.4 Home page COMTRAXX® user interface

1. Open an Internet browser.
2. Enter the IP address of the COMTRAXX® device in the address line (example: http://172.16.60.72).

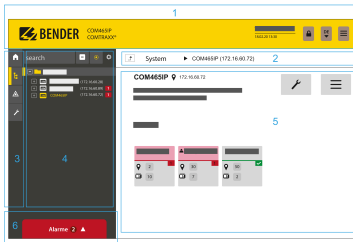

1. **Headline**
2. **Path display**
3. **Navigation**
4. **Subnavigation**
5. **Content area**
6. **Alarm overview**

4.4.1 Headline



1. Clicking the logo: Return to home page
2. Used device: Device type
3. Used device: **System name > Subsystem > Device address**
Date and time of the device
4. The symbol indicates that the web user interface is protected by a password. Click the symbol and then click **Login** to enter the user name and password.
5. Language selection
6. Open/close navigation (button only available in small browser window)





4.4.2 Path display (breadcrumb navigation)



1 = Device

The path display always shows in which part of the system you are currently located in the content window.


4.4.3 Navigation

| | Menu | Description |
|--|-----------------|---|
|  | Start | Display of information about the device and the software. Please have this information to hand if you need to contact us for assistance by telephone. |
|  | System overview | The system overview shows all devices in the system either by subsystem or by interface. Pending alarms and operating messages are displayed and the respective devices can also be configured. |
|  | Alarms | Display of all pending alarms and data of the devices sending an alarm |
|  | Tools | Functions that affect the entire system |

The navigation symbols are permanently visible on the left side. Even if a random submenu of the web user interface is open, you can navigate to one of the four areas by clicking the respective symbol.

4.4.4 Subnavigation

The system overview is displayed in the subnavigation.

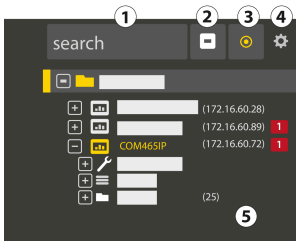


Legend

1. Full text search in the system for device names or menu entries. Matches are highlighted in yellow.
2. Close unfolded tree in the subnavigation
3. Fold out automatically: When enabled (= yellow), the displayed contents of the content area are shown in the subnavigation with automatically unfolding device tree in addition to the path display. Path display and content area are always synchronous. When disabled (= white), the subnavigation is not adapted to the path display or the current content area.
4. - Select display by subsystems or by interfaces
 - Display time stamp of the measured values
 - Show inactive channels
 - Configure the line height of the entries.
5. The number in brackets (here: 25) indicates the set bus address.


i *The display by subsystem or interface is possible independently of the configured Modbus image V1 or V2.*

4.4.5 Content area

Display of the system, alarms and entries for the tools

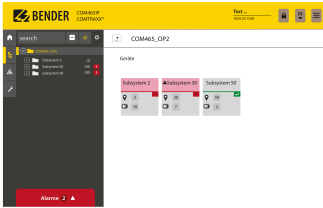

Content area of the system display by **subsystem**

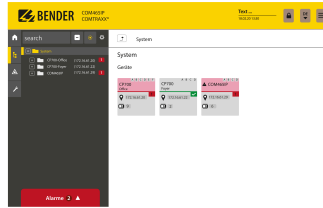

Content area of the system display by **interface**

4.4.6 Overview of pending alarms



Clicking the alarm overview: List of pending alarms

Clicking on the list: Details about the alarms in the content area

4.5 Setting up password protection for EDGE500

Password protection can be configured for the roles User and Administrator. This allows regulating the access to the web user interface.



CAUTION

Risk of damage to equipment due to unauthorised access

The password protection for the gateway protects against unauthorised access to a limited extent only. Attackers from the Internet may still be able to read data and change settings. It is absolutely necessary that:

- The network is separated from the Internet.
- Common security mechanisms are applied (firewall, VPN access).

The password protection is configured in the device menu of the respective COMTRAXX® device.

Select **Menu > Settings > Security > Password**.

Overview of factory settings

| | Status | Password | User name | Read access | Write access |
|---------------|---------|----------|-----------|-------------|--------------|
| Administrator | enabled | default | admin | Allow | Allow |
| User | enabled | default | user | Allow | Deny |
| not logged in | - | - | - | Deny | Deny |

4.6 Making settings on the device

Changes must be saved before leaving the respective mask. Otherwise they are discarded.


4.6.1 Digital inputs

Menu > Settings > Digital inputs 1 - 8

For each of the 8 digital inputs IN1...8, the following can be defined:

| Parameter | Options/Setting range | |
|------------------|--|------------------|
| Mode | High-active Low-active Impuls (High-active) Impuls (Low-active) | |
| Measurement type | Operating message Alarm Error(s) | |
| t_{on} | Response delay | 0 s...10 minutes |
| t_{off} | Switch-off delay | |

An event is executed when the digital input experiences an edge change. The edge change must be present at least for the set response delay t_{on} , otherwise it is ignored.

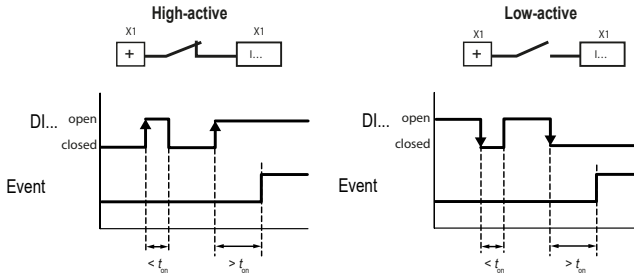

4.6.2 Relay

Menu > Settings > Relay

| Setting options | Options | Explanation |
|-----------------|--------------|---|
| Relay mode | N/O | Normally Open |
| | N/C | Normally Closed |
| Relay mode | Cont. | Relay remains permanently energised. |
| | Imp. | Relay is energised for one pulse. |
| | Flash | Relay switches several times between active and inactive. |
| Timer | 100 ms...2 s | "Imp." mode: impulse time "Flash" mode: cycle time |

| Setting options | Options | Explanation |
|-----------------|----------|--|
| PowerOn | off | Relay is deenergised during device start. |
| | on | Relay is energised during device start. |
| | PowerOff | During device start the relay takes on the same state it had when the supply voltage was switched off. |

4.6.3 Interface

Menu > Settings > Interface

The required parameters for each connected interface are set here:

- Ethernet
- BMS
- Modbus
- SNMP
- POWERSCOUT®

4.6.4 Edit texts

Menu > Settings > Edit texts

The individual device and channel texts of the COMTRAXX® device are configured here. The data logger texts can also be edited.

| Setting options | Setting | Description |
|-----------------|-----------------------------------|---------------------------------|
| Channels | Digital input 1...8 | Descriptive text and alarm text |
| | Relay 1...3 | Descriptive text and alarm text |
| | Timer 1...12 | Descriptive text |
| Device | Device name | |
| | Message in case of device failure | |
| Data logger | Data logger1...30 | Descriptive text |

4.6.5 E-mail

Menu > Settings> E-mail > Profile

The following is set for 5 different profiles:

| Setting options | Setting for.../Description |
|-----------------|--|
| Settings | Profile Active Server Timeout Port Encryption Check certificate User Password Send test e-mail Configure e-mail |
| E-mail | Language Sender To (= addressee) Subject Messenger header Message footer E-mail in the event of prewarning E-mail in the event of test alarm System monitoring ¹⁾ Send test e-mail Configure e-mail |
| Test | Send test e-mail to check all settings |

- 1) Activates e-mail monitoring for the entire system. Individual e-mail configurations are not taken into account, but all measured value alarms and device failures are reported.

4.6.6 History/Logger

Menu > Settings > History/Logger

| Setting options | Setting for.../Description | |
|--------------------|----------------------------|-------------------------------|
| History | History content | Complete system |
| | | Own device and all subdevices |
| | Delete | |
| Data logger 1...30 | Name | |
| | Path | |
| | Status | on, off |
| | Percentage change | off, 1...99 % |
| | Trigger | off, 15 minutes ...7 days |
| | Absolute change | off or precise limit value |
| | Overwrite | yes, no |
| | Delete | |
| BMS recording | | off, 1...7 days |

4.6.7 Clock

Menu > Settings > Clock

| Setting options | Setting for.../Description |
|-----------------|----------------------------|
| Summer time | off, on, CEST, DST |
| UTC offset | |
| NTP | off, on |
| NTP server | |

4.6.8 Security

Menu > Settings > Security > Password

The password protection is configured in the device menu of the respective COMTRAXX® device. Password protection can be configured for the roles **User** and **Administrator**. This allows regulating the access to the web user interface.



CAUTION

Risk of damage to equipment due to unauthorised access

The password protection for the gateway protects against unauthorised access to a limited extent only. Attackers from the Internet may still be able to read data and change settings.

It is absolutely necessary that:

- *The network is separated from the Internet.*
- *Common security mechanisms are applied (firewall, VPN access).*

The default user names and authorisations ("admin, read and write" and "user, read only") cannot be changed

| Setting options for role | Setting for.../Description |
|--------------------------|-----------------------------------|
| Status | enabled, disabled |
| Password | A...Z a...z 0...9 - — |

4.6.9 Factory settings

Menu > Settings > Factory setting

When resetting to factory settings, all settings, parameters, data logger and history memory are reset. It can be specified that Ethernet settings are not affected.

4.6.10 Software update

The EDGE500 software is continuously being developed. To use the latest software on your devices, you have the option of updating your devices regularly. You can update both the EDGE500 and COMTRAXX® devices connected via Modbus.




It is recommended that you back up your data before updating.



Download the latest software version from the Bender homepage and save it on your PC.

Update EDGE500

You can find the update option in the web browser navigation under

 Tools > Service > Update. Follow the individual steps.



Update COMTRAXX® devices connected via Modbus


You will find the update option in the web browser navigation under  Tools > Modbus Devices > Manage Devices > (Functions >  Update). Follow the individual steps.

4.7 Device failure monitoring


Specify which devices are to be monitored for a device failure. There are various ways to do this:

- a)

Select the device to be monitored in the  **System overview** and activate or deactivate the bell in the respective tile of the device. The overview of the selected devices can be found under  **Tools > Monitoring > Device failure monitoring**.
- b)

Manually add or delete the devices to be monitored under  **Tools > Monitoring > Device failure monitoring**.

c)

Under  **Tools > Monitoring > Device failure monitoring > Import actual state** (button in the footer), add all active devices of the entire system to the monitoring. The list can be edited to remove unnecessary devices from the device failure monitoring.

i *Device failure monitoring is only active on the COMTRAXX® device on which it has been individually configured.*

Other COMTRAXX® devices in the system are not affected by these settings and use their own device failure monitoring.

This means that device failures in the system can only be reported on the COMTRAXX® devices on which they were previously configured.

5 Visualisation

The data from the Bender system can be displayed in a separate visualisation. It provides access to all measuring channel information, alarms and other data. The application is shown in a separate browser tab of the connected device and does not require any further plug-ins. The visualisation is configured in an editor. The editor is accessed via the menu item

 **Tools > Visualisation > Edit**

in the COMTRAXX® application. The user interface is illustrated schematically in the graphic below.

| | | |
|----------------|-------------|--------------|
| Browser tab | | |
| Headline | | |
| Dashboards | "Work area" | Settings |
| Widget library | | |
| | | Used widgets |

The "work area" represents the visible area in the browser tab. Individual elements with different functions, so-called **widgets**, are placed on it to form a "picture" called "Dashboard". Up to 50 different dashboards can be created and linked to each other. All the dashboards organised in an interconnection are grouped together as a "project" and can be saved on the PC or transferred to the device.

The created visualisation can then be started in a separate browser tab in the COMTRAXX® application via the menu items

 **Tools > Visualisation > Displays.**

The following section describes the buttons, tools and elements available in the editor.

5.1 The headline

| | | | | | | | |
|--------|---|---|---|---|--------------|-----------|--|
| File ▼ |  |  |  |  | Project name | English ▼ |  |
|--------|---|---|---|---|--------------|-----------|--|

5.1.1 Drop-down menu "File"

File ▼

| | |
|--|--|
| New project | Create a new project |
| New dashboard | Create a new dashboard |
| Import project from PC (Ctrl+O) | Import existing project from PC |
| Import active project from device (Ctrl+L) | Import current project from the device to PC |
| Export project to PC (Ctrl+Shift+S) | Export created project to PC |

| | |
|------------------------------------|---|
| Save and export to device (Ctrl+S) | Save changes and export to device! |
| Manage icon library | Saved icons can be used alongside the standard icons in measurement widgets |
| Copyright | List of software used |







Saving and exporting projects

Please note that only the visualisation is saved! The configuration of interfaces, link variables and links is stored in a separate backup file. This is done in the COMTRAXX® application. Select the used device in the bus overview:

Device settings > Export backup.

This backup contains all configurations made in the COMTRAXX® application, such as link variables, alarm addresses, etc.

5.1.2 Grouping functions

| | |
|---|--|
|  | No widgets selected |
|  | Group selected widgets. Individual widgets can then only be moved in groups. |
|  | No group selected |
|  | Selected group is ungrouped. The widgets can then be edited individually. |

5.1.3 Undo/Redo



Undo or redo editing step

5.1.4 Project name

Display of the project name.

5.1.5 Language selection

Select the operating language of the editor.



The editor language not necessarily the language of the automatically generated messages displayed on the device (= export language).

| | | | | |
|-----------|------------|---------|---------------|---------------|
| Czech | German | Greek | English GB | English US |
| Spanish | Finnish | French | Hebrew | Croatian |
| Hungarian | Indonesian | Italian | Japanese | Sanskrit |
| Dutch | Norwegian | Polish | Portuguese PO | Portuguese BR |
| Russian | Slovenian | Serbian | Swedish | Chinese |
| Turkish | | | | |

5.1.6 Simulating visualisation







Open the project in a browser tab .

5.2 The "work area"

The "work area" represents the display of the visualisation. The widgets can be moved from the widget library to the work area using drag & drop. It only represents a preview of the expected display. The functionality (e.g. navigation) can be tested in the browser after saving the project.

5.3 Dashboards

| | |
|---|------------------------------|
| 2/50 | Number of created dashboards |
|  | Home page |
|  | Delete dashboard |
|  | Password protected dashboard |
|  New dashboard | Create a new dashboard |

Function

Display and manage existing dashboards and add new dashboards.

A dashboard is a page that can be displayed in the visualisation. Up to 50 different pages (dashboards) can be created. To link the individual dashboards, navigation elements must be placed on the pages.

If several dashboards have been defined, one of the dashboards acts as home page. It is marked with a house icon. This dashboard appears as the starting point after executing the visualisation. The home page assignment is described in the project settings in chapter "Project settings".

The active dashboard is highlighted in yellow.

| Project | Selection | Alignment | Explanation |
|------------------------|-----------|-----------|--|
| Dashboard "dashboard3" | | | In the " Selection " tab (right side) the dashboard can be named and also password protected ("Protected" yes/no). Password-protected dashboards are marked with a lock symbol in the dashboard list. |
| General | | | |
| Name | | | |
| Protected | yes/no | | |
| Password | | | |


5.4 Widget library

A widget is a template for a defined function to which various values (parameters) can be assigned. This allows both specific values to be transmitted to specific addresses and values from linked systems to be evaluated and displayed.

All available widgets are included in a library.

Use the scroll bar (right) to navigate to further widgets.

When moving the mouse pointer over a widget in the widget library (mouseover), the icons (i and +) with two functions appear at the bottom of the widget.

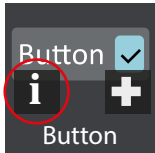

Information on the selected widget















Place selected widget on the top left of the work area













To place a widget on the work area, it can also be dragged there with the mouse see chapter "Placing widgets in the work area", Page 40.






The widget settings are made on the right side in the "Settings" area. The assignment of values to a widget is described in the chapter "Widget settings", Page 42.

5.4.1 Widget list


| Icon | Labelling | Explanation |
|------|------------------------|--|
| | Alarm Bar | <i>Alarm overview</i> Display alarm messages in an alarm line. Settings are made at "Alarm addresses" in the COMTRAXX® user interface in the browser. If several alarm messages are pending, the alarms are displayed one after another. The alarm is always displayed with the background colour set for the most important alarm. |
| | Background area | <i>Display frame</i> Display a frame with a background colour (optionally with shading). |

| Icon | Labelling | Explanation |
|--|--------------------------------------|--|
|  | Bar Graph | <i>Bar graph</i> A linear graph is represented by a defined value. |
|  | Button | <i>Switch with state display</i> The current state can be displayed additionally (optional). |
|  | Cleaning Mode | <i>Lock display operation for a short time</i> Screen lock for cleaning purposes. |
|  | Clock | <i>Display time</i> Display a digital or analogue clock. |
|  | CurrentState/ TargetState | <i>Display current value and target value</i> The target value can be adjusted via the buttons. For control devices that trigger certain events when a target value is reached. |
|  | Feedback | <i>Display state</i> Colour indication of a value (True or False; ON or OFF). |
|  | Gauge | A graph in the shape of a circle is represented by a defined value. |
|  | Group | <i>Group elements in a frame</i> Display a frame with heading. |
|  | iFrame | <i>Display another website</i> Display the content of a URL in a frame of a freely definable size. |
|  | Image | <i>Display a graphic</i> Place image contents from files. Set level = 0 for background images. Higher levels may overlap other widgets. |
|  | Info | <i>Device information</i> Tabular display of address information |
|  | Label | <i>Create label</i> Display a text field |

| Icon | Labelling | Explanation |
|--|-----------------------------|---|
|  | Language | <i>Switch language</i> You can switch to a defined language. |
|  | Line Graph | <i>Line graph</i> Value pairs are connected by a line. |
|  | Link | <i>Link to another dashboard</i> Link dashboards. The target is the dashboard to which the user wants to switch. |
|  | Logger Table | <i>History memory</i> Display the history memory content of the device. The content to be displayed can be configured. |
|  | Measurement | <i>Display measured value</i> Display the measured value of a channel of a connected device. |
|  | Multiple Images | <i>Display multiple graphics</i> Display different pictures, which are shown depending on the current input value. |
|  | Multiple Labels | <i>Display multiple labels</i> Display different labels, which are shown depending on the current input value. |
|  | Multiple Value Write | <i>Write multiple predefined values</i> Defined values are sent to a defined address. |
|  | RGB Color Picker | <i>Colour picker window</i> Range of 16.7 million colours. Provides an RGB colour value. |
|  | RGB-Display | <i>Display frame</i> Display a frame with a background colour (optionally with shading). |
|  | Single Value Write | <i>Write a predefined value</i> Send a set value to a defined address. |
|  | Slider | <i>Slider with state display</i> Slider with optionally available state display. |

| Icon | Labelling | Explanation |
|--|-----------------------|--|
|  | Start Test | <i>Start device test</i> Device tests can be started. |
|  | Timer | <i>Timer function</i> Display of a configurable timer. |
|  | Timestamp | <i>Display a fixed timestamp</i> The date and time can be displayed from a defined source. |
|  | Up/Down Button | <i>Button with two programmable functions and status display</i> Control of equipment (lamp, temperature, shutter...). The current value can optionally be displayed. |
|  | URL Link | <i>Open website</i> Link to a URL page, which is then opened in a new browser tab. |

5.4.2 Placing widgets in the work area

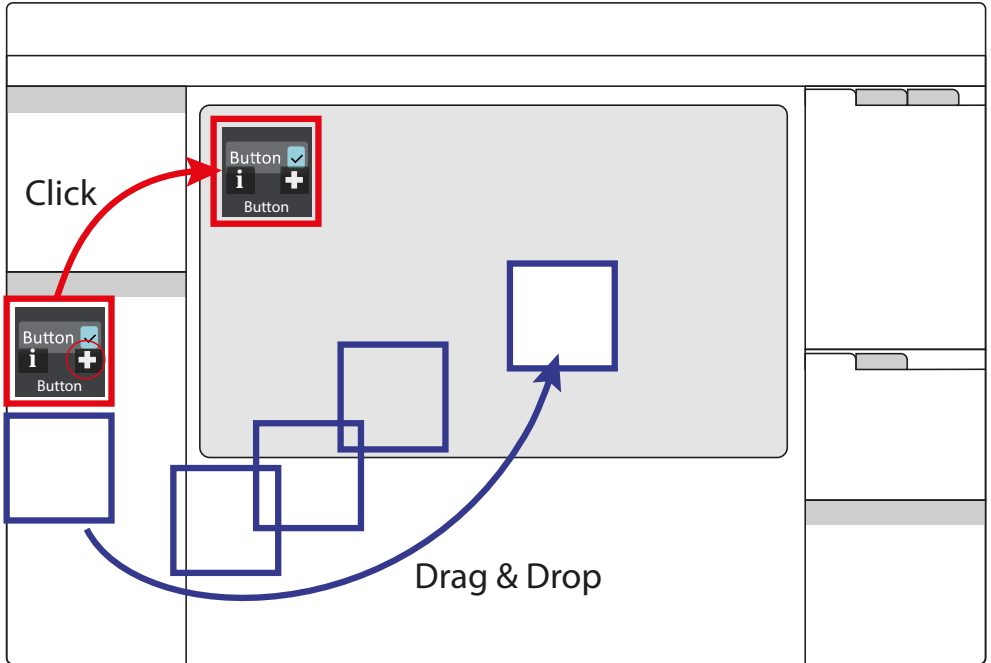

Clicking on the **+** icon of an active widget in the widget library inserts it into the upper left corner of the work area.

The widget can also be placed directly and freely on the work area with the mouse using "drag & drop".


5.5 Settings

All value-based settings are made in the "Settings" area. The values displayed there always represent the values of the active selected element. Elements can be both dashboards and widgets. If several widgets are selected, value changes always apply to **all** selected widgets. This also applies to widgets that have been combined into groups. The number and type of parameters differ depending on the widget.

i Use the scroll bar (right) to navigate to the setting options hidden in the monitor view.

5.5.1 Project settings

Make individual project settings here.

| Project | Selection | Alignment | Explanation |
|--|-----------|---|--|
| Miscellaneous | | | |
| Start | | Home | Set home page (dashboard list house icon) |
| Jump to start page | | <input type="checkbox"/> | Automatic return to start page ON/OFF |
| Return to start page after time (min) | | 5 | Time after which the system jumps back to the start page when inactive. Only relevant if jumping back to the start page is activated. |
| Fall back to default language | | <input type="checkbox"/> | Automatic fall back to default language ON/OFF |
| Fall back to default language after time (min) | | 5 | Zeit, nach der bei Inaktivität zurückgesprungen wird. Nur relevant, wenn Rücksprung auf Standardsprache aktiviert. |
| Fall back to controlled dashboard | | <input type="checkbox"/> | Automatic fall back to controlled dashboard ON/OFF Controlled Dashboard: Using the complex links, a dashboard change can be triggered by a topic (device address). If return is activated, it is possible to switch back to a defined dashboard after a defined time. |
| Fall back to controlled dashboard after time (min) | | 5 | Time after which a jump back occurs in the event of inactivity. Only relevant if a fall back to the controlled dashboard is activated. |
| General | | | |
| Name | | Project 11 | Project name in the title bar |
| Dashboard width (px) | | 800 | Dashboard dimensions in pixels |
| Dashboard height (px) | | 480 | (the dimensions should be based on the size of the visualisation to be configured) |
| Export language | | English | Language of the channel descriptions (may differ from editor language) |
| Style | | theme-dark | Appearance of the operating elements (buttons) |
| Relative export | | <input type="checkbox"/> | Scaling of the work area to the size of the target medium |
| Font | | | |
| Font colour | #000000 |  | Font colour #RRGGBB with numerical and interactive colour selection |
| regular | normal | 100 | Font settings (weight, slant and size) |
| Font size in percent | | | Font size setting range 1...1000 % |
| Line height | | | Setting range line height 0...10 |



Font colour selection

Numerical input using 6-digit hexadecimal value with leading number sign (hashtag). Colour values are formed as follows:

#RR GG BB

R = red value; G = green value; B = blue value

5.5.2 Widget settings

Individual widget settings can be made here. Depending on the selected widget, the corresponding setting options are available. The number and type of parameters displayed vary depending on the active widget. In the following, the possible parameter areas are described independently.

5.5.2.1 Predefined icon symbols and units

Icon symbols

One of the defined icon symbols can be selected from a drop-down menu. After selection, it is displayed on the left of the respective widget.

It is also possible to add and use your own icons under **File > Manage icon library**.



Units

Overview units (predefined)



| | | | | | | | |
|------------|--------------------|-------------|-------------------|-------------|--------------|-------------|---------------------------|
| Ω | Ohm | A | Ampere | V | Volt | % | Percent |
| Hz | Hertz | Baud | Baud (data rate) | F | Farad | H | Henry |
| °C | Degree Celsius | °F | Degree Fahrenheit | s | Second | min | Minute |
| h | Hour | d | day | mo | Month | W | Watt |
| var | Volt-ampere react. | VA | Volt-ampere | Wh | Watt-hours | varh | Volt-ampere- hours react. |
| VAh | Volt-ampere-hours | ° | Degree | Hz/s | Hertz/second | bar | Bar |

5.5.2.2 The "Position and size" area

Set the position and size of the selected widget.

| Project | Selection | Alignment | | Explanation |
|--|-----------|---|----|---|
| Position and size | | | | |
| X | 5 | Y | 10 | Position on the work area (in pixels) Default position in the work area is top/left |
| Width | 275 | Height | 50 | Widget dimensions (in pixels) |
|  | 3 |  | 0 | Position on the z level and angle of rotation |








5.5.2.3 The "General" area

| Project | Selection | Alignment | Explanation |
|---------------------|-------------|---|--|
| General | | | |
| Name | Widget name | | Assigned automatically or by user |
| Label | Labelling | | Labelling widgets in the work area |
| | |  | Create multilingual widget labelling |
| Multiple lines | | <input type="checkbox"/> | Line break for labelling ON/OFF If not activated, excessively long labels are cut off with "...". |
| Global | | <input type="checkbox"/> | Placing the widgets on all dashboards ON/OFF |
| Locked | | <input type="checkbox"/> | Locking the widget ON/OFF |
| Two writing targets | | <input checked="" type="checkbox"/> | Enable value transfer to two digital outputs (for "Up/Down Button" widget) |
| Hide in editor | | <input type="checkbox"/> | Hidden widgets are marked with  in the widget list. |

5.5.2.4 The "Miscellaneous" area

| Project | Selection | Alignment | Explanation | Widget |
|---|-----------|-------------------------------------|--|--|
| Miscellaneous | | | | |
| Target | | | Select link target from existing dashboards | „URL“ |
| URL | | | | „iFrame“ |
| Step size | | | | „Current state/Target state“ „Up/Down Button“ |
| Minimum | | | Define display limits | „Current state/Target state“ „Bar Graph“ „Up/Down Button“, „Slider“ |
| Maximum | | | | |
| Cont. | | | Locking the display (s) | „Cleaning Mode“ |
| Enable changing the time | | <input checked="" type="checkbox"/> | | „Clock“ |
| Show advanced settings | | <input checked="" type="checkbox"/> | | |
| Steps | | | Define sections (area, colour) | „Gauge“ „Bar graph“ |
| Use section colours | | <input checked="" type="checkbox"/> | | „Gauge“ |
| Start angle | | | Define the start angle of the arc (0...360 °) | |
| Angle span | | | Set displayed arc (0...360 °) | |
| Arc spacing | | | Gap between the sections (0...3 °) | |
| Language | | | Select display language | „Language“ |
| Show text | | <input checked="" type="checkbox"/> | | |
| Changing dashboard after a language selection | | <input checked="" type="checkbox"/> | If activated, "Controlled Dashboard" option possible | |
| Controlled Dashboard nutzen | | | Select target from list of created dashboards. If activated: Set source | „Link Button“ „Language“ |
| Value | | | Set single value | „Write single value“ |

5.5.2.5 The "Appearance" area

| Project | Selection | Alignment | Explanation |
|---|---|---|---|
| Appearance | | | |
| Alignment |  | | Alignment of the labelling on the element |
| Icon | - Icon - | | For options, see Icon symbols |
| Style | Selection: Normal, Left marked buttons, Menu, Tab Menu | | |
| Unit | | | For options, see Units |
| Number of fractional digits | | 2 | Set indication accuracy |
| Remove trailing zeros | | <input checked="" type="checkbox"/> | 2.70000 is displayed as 2.7 |
| Transparent background | | <input checked="" type="checkbox"/> | |
| Labels | | | For the "Label" and "Multiple Labels" widgets |
|  Add label | | | Add an additional line |
| Default value | default | | Standard labelling |
| Image(s) | | | For the "Image", "Multiple Images" and "RGB Color Picker" widgets |
|  Add image | | | Select an image source |
| Default value | default.png |  | Default image |
| Maintain aspect ratio | | <input checked="" type="checkbox"/> | Maintain aspect ratio ON/OFF |
| Hide value | | <input checked="" type="checkbox"/> | For the "Measurement" widget |
| red | |  | For the "RGB Display" widget |
| green | |  | |
| blue | |  | |
| Corner radius | | | Each corner can be defined individually. |

The "Appearance Alarm Bar" area

| Project | Selection | Alignment | Explanation |
|--|-------------|-------------------------------------|--|
| Appearance | | | |
| Show alarm details | | <input checked="" type="checkbox"/> | |
| Show alarm groups | | <input checked="" type="checkbox"/> | |
| Set the size of the alarm groups automatically | | <input checked="" type="checkbox"/> | |
| Show alarm popup preview | | <input type="checkbox"/> | |
| Column name | Width | Visibility | |
| Time | Value in px | <input checked="" type="checkbox"/> | The order of the columns cannot be changed. The width (pixels) of the displayed columns can be changed in steps of 10 using the arrow keys or to any value using the number field. If columns are not necessary, they can be hidden by removing the check mark. If the full path is longer than the space available in the column, the text is always truncated on the left. This ensures that the most important information remains visible. |
| Alarm group | Value in px | <input checked="" type="checkbox"/> | |
| Description | Value in px | <input checked="" type="checkbox"/> | |
| Measured value | Value in px | <input checked="" type="checkbox"/> | |
| Instruction | Value in px | <input checked="" type="checkbox"/> | |
| Corner radius | | | Each corner can be defined individually. |

The "Timer appearance" and "Timestamp appearance" areas

| Project | Selection | Alignment | Explanation |
|-------------------|-----------|-------------------------------------|--------------------------------------|
| Appearance | | | |
| Font | | | Selection: Normal/14-segment display |
| Show seconds | | <input checked="" type="checkbox"/> | For "Timestamp" widget |
| Show date | | <input checked="" type="checkbox"/> | |
| Show time | | <input checked="" type="checkbox"/> | |
| Local time | | <input checked="" type="checkbox"/> | |

The "Appearance Logger Table" area

| Project | Selection | Alignment | Explanation |
|---------------------|-------------|-------------------------------------|---|
| Appearance | | | |
| Column name | Width | Visibility | |
| Date | Value in px | <input checked="" type="checkbox"/> | |
| Timestamp | Value in px | <input checked="" type="checkbox"/> | Timestamp of the record |
| Path | Value in px | <input checked="" type="checkbox"/> | Path of the measuring point |
| Type | Value in px | <input checked="" type="checkbox"/> | Type of record (Alarm start, Alarm end, Device restart, Acknowledge, ...) |
| Start/Min | Value in px | <input checked="" type="checkbox"/> | Value at occurrence of the alarm |
| Max. | Value in px | <input checked="" type="checkbox"/> | Maximum value for the duration of an alarm (only for "Alarm end") |
| Channel description | Value in px | <input checked="" type="checkbox"/> | Description of the measuring point |
| Alarm | Value in px | <input checked="" type="checkbox"/> | Type of alarm |
| Test | Value in px | <input checked="" type="checkbox"/> | Entry initiated by test |

The order of the columns cannot be changed.

The width (pixels) of the displayed columns can be changed in steps of 10 using the arrow keys or to any value using the number field. If columns are not necessary, they can be hidden by removing the check mark.

If the full path is longer than the space available in the column, the text is always truncated on the left. This ensures that the most important information remains visible.








The "Clock appearance" area

| Project | Selection | Alignment | Explanation |
|-------------------------------|-----------|-------------------------------------|---|
| Appearance | | | |
| Mode | | Analogue/Digital | Mode |
| Colour | #00000ff | <input type="checkbox"/> | Numerical or interactive colour specification |
| Show hour marker ¹ | | <input checked="" type="checkbox"/> | Hour marker ON/OFF |
| Show seconds ¹ | | <input checked="" type="checkbox"/> | Second hand ON/OFF |
| Show date ² | | <input checked="" type="checkbox"/> | Display date ON/OFF |
| Show time ² | | <input checked="" type="checkbox"/> | Display time ON/OFF |
| Show seconds ² | | <input checked="" type="checkbox"/> | Display seconds ON/OFF |

¹ Analogue mode

² Digital mode

The "Appearance Background Area" and "Appearance Language" areas

| Project | Selection | Alignment | Explanation |
|----------------------------|-----------|---|--|
| Appearance | | | |
| Colour | |  | Colour specification filling colour (numerical or interactive) |
| Border | |  | Display border ON/OFF |
| Frame colour | |  | Colour specification frame (numerical or interactive) |
| Frame size | 1 | | Frame thickness (in pixels) |
| Shadow | |  | Shadow ON/OFF |
| Shadow colour ¹ | |  | Colour specification shadow (numerical or interactive) |
| Shadow x ¹ | 0 | | Shadow direction horizontal |
| Shadow y ¹ | 0 | | Shadow direction vertical |
| Shadow blur ¹ | 5 | | Shadow gradient (intensity) |
| Shadow width ¹ | 0 | | Shadow size |
| Inner shadow | |  | |
| Corner radius | | | Each corner can be defined individually. |
| Transparent background | |  | |

¹ Additional parameters are **shown** when "Shadow" option is enabled.







Colour selection

Numerical input using 8-digit hexadecimal value with leading number sign (hashtag). Colour values are formed as follows: **# RR GG BB TT**

R = red value; G = green value; B = blue value; T = transparency

5.5.2.6 The "Communication" area

| Project | Selection | Alignment | Explanation |
|-------------------------|---|---|--|
| Communication | | | |
| Endpoint to deactivate | |  | This function can be disabled. The source that does this is assigned here. |
| Endpoint to hide | |  | This function can be hidden. The source that does this is assigned here. |
| Target / Source / Value | |  | Setting options depend on the widget |
| Connections | | | For "Multiple Value Write" widget |
| |  | Add connection | Add new link |

| | | |
|--|---------|--|
| Write in the other direction by pressing and holding | | When enabled, values can also be written back to a source by pressing and holding the button. For "Multiple Value Write" widget |
| relative/absolute | | For "RGB Color Picker" and "RGB Display" widgets: relative: 0...100 % absolute: 0...255 |
| red | | For "Color Picker" widget |
| green | | |
| blue | | |
| Test group | Group 1 | For "Start Test" widget |
| Current value | | For "Current State/Target State" widget |
| History/Logger | | For "Line Graph" and "Logger Table" widgets |
| Interval to reload Data | | |
| Timerange | | |

i **Colour selection**
 Numerical input using 8-digit hexadecimal value with leading number sign (hashtag). Colour values are formed as follows: **#RR GG BB TT**
R = red value; G = green value; B = blue value; T = transparency

5.5.2.7 The "Value display" area

| Project | Selection | Alignment | Explanation |
|-----------------|-----------|-----------|---|
| Value display | | | |
| Show state | | | Display state ON/OFF For "Up Down Button" and "Button" widgets |
| State | | | Source, whose state is to be displayed For "Slider" and "Feedback" widgets |
| Use custom text | | | Display your own status labelling on the button ON/OFF |
| Steps | | | |
| Farbe Default | #98cfdc | | Colour specification for default state |
| Colour step 1 | #808284 | | Colour specification for step 1 |
| + | | Add step | Add further steps and colour definitions |

| | | |
|--------|---|---|
| Source |  | For "Feedback" and "Up Down Button" widgets |
|--------|---|---|

Additional parameters are **shown** when the option is activated

i **Colour selection**
 Numerical input using 8-digit hexadecimal value with leading number sign (hashtag). Colour values are formed as follows: **#RR GG BB TT**
R = red value; G = green value; B = blue value; T = transparency

5.5.2.8 The "Font" area

| | | |
|---------------------|------------------|-------------------------------------|
| Project | Selection | Alignment |
| Font | | |
| Use global settings | | <input checked="" type="checkbox"/> |

The additional parameters are only displayed if the "Use global text settings" option is deactivated.




| Project | Selection | Alignment | Explanation |
|----------------------|-----------|--------------------------|---|
| Font | | | |
| Use global settings | | <input type="checkbox"/> | |
| Font colour | #dedede | <input type="text"/> | |
| regular | | | Selection: regular, light, bold, semibold |
| normal | | | Selection: normal, italic |
| Font size in percent | | | 1...1000 % |
| Line height | | | 0...10 |

5.5.2.9 The "Action" area

| Project | Selection | Alignment | Explanation |
|---------------|-----------|-----------|---|
| Action | | | |
| Action | | | Selection: Push/Switch For "Button" widget |

5.6 Widget alignment

This section provides help for easy arrangement and alignment of the widgets on the display of the device.

| Project | Selection | Alignment | Explanation |
|--|-----------|-----------|--|
| Horizontal | | | Horizontal options left-aligned, centred, right-aligned The fourth button formats selected widgets to the largest common width. |
|  | | | |
| Vertical | | | Vertical options align to top, centre, bottom The fourth button formats selected widgets to the largest common height. |
|  | | | |
| Distribute spaces | | | Distance distribution options The space between several selected widgets can automatically be distributed evenly in horizontal and vertical direction. |
|  | | | |

5.7 Guides and grid

5.7.1 Guides

| Guides | Grid | | Explanation |
|--------------------------|-------------------------------------|-----|---|
| Show guides | <input checked="" type="checkbox"/> | | Guides ON/OFF |
| Align to guides | <input type="checkbox"/> | | Align widgets to guides ON/OFF |
| Lock guides | <input type="checkbox"/> | | Lock guides ON/OFF |
| + Add guides | | | Add a guide |
| <input type="checkbox"/> | vertical | 400 | <input checked="" type="checkbox"/> Display a configured vertical guide |
| <input type="checkbox"/> | horizontal | 200 | <input checked="" type="checkbox"/> Display a configured horizontal guide |

5.7.2 Grid

| Guides | Grid | Explanation |
|---------------|--------------------------|------------------------------|
| Show grid | <input type="checkbox"/> | Grid ON/OFF |
| Align to grid | <input type="checkbox"/> | Align widgets to grid ON/OFF |
| Size | 10 | Setting grid size |

5.8 Used widgets

| Widgets | |
|-----------|---|
| Widget_1 | X |
| Widget_2 | X |
| Widget_3 | X |
| Widget... | X |
| Widget... | X |

The list shows all widgets of the displayed dashboard. By clicking on an entry, the corresponding element is highlighted in yellow and can be edited. It can be deleted by clicking on the **X** in the respective widget.



Use the scroll bar (right) to navigate to hidden widgets.

6 Virtual devices

The concept of virtual devices involves combining existing measurements with other measurements in such a way that additional values, operating or alarm states can be displayed. Combine up to 26 measurements with numerical and logical operators to create a new "virtual" measuring point. Each of these measuring points uses one channel. A virtual device consists of a maximum of 16 channels. Virtual devices are treated like real devices and are fully integrated into the Bender system: All calculated values

- can be stored in a data logger,
- are available via Modbus,
- can be displayed in a visualisation.

6.1 Application possibilities

Alarms and warnings


Alarms and warnings can be configured for Modbus devices. Through virtual devices, user-defined warning limits can be set for devices that do not offer this option (e.g. PEMs). Each generated warning appears in the warning history and can be used to send an e-mail notification.

Device failure monitoring

In large buildings with many devices installed in a production hall, department or floor, virtual devices simplify simultaneous monitoring for device failure. It allows narrowing down the location of the failure and enables fast intervention.

Converting to BMS bus (mirroring)

Operating states of the virtual devices can be transmitted via BMS bus even if the real devices have no BMS interface. For this purpose, the virtual devices are "mirrored" to the BMS bus. The states of the measuring points (channels 1...12) are transmitted during the channel query of the BMS master.

 Only **operating states** are transmitted via the BMS bus (No alarm, Prewarning, Alarm). Specific measured values cannot be transmitted.

6.2 Managing virtual devices

Path: Tools > Device management > Virtual devices

6.2.1 Virtual devices: Overview list/Main page

Address


Device addresses: 1...255

Alarm

Current operating state of the virtual device (prewarnings are displayed as alarms)

No Alarm  Alarm

Device name

 Virtual devices are always named "VD700...".

Mirrored

When enabled, the operating states of channels 1...12 of the virtual device are transmitted via BMS bus.

6.2.2 Editing a virtual device







Device address, device name and BMS mirroring can be edited.

6.2.3 Editing channels



In the channel overview, the 16 possible channels are displayed with the following information:

- Current operating state (no alarm  Prewarning  Alarm)
- Individual text for prewarning or alarm
- General and individual channel description
- Current measured value
- Defined formula

In the overview, channels can be created or edited via . Channels can be deleted via .



Refer to the "Legend and examples" tab for assistance.

6.2.4 Deleting a device



A virtual device can be deleted via the bin.

6.2.5 Adding a virtual device

Use the button in the footer to add virtual devices.



The number of virtual devices that can be created depends on the COMTRAXX® device used or its active function modules.

Device address

Select a free bus address from the drop-down menu.



Virtual devices are treated like real devices. Therefore, addresses must not be assigned twice!

Device name

Assign a name to the virtual device.



Virtual devices are always named "VD700...". In addition, an individual name can be assigned.

Mirroring to BMS

If operating states are to be transmitted via BMS, this can be set here.



Virtual devices are treated like real devices. Therefore, addresses must not be assigned twice!

7 Modbus TCP server



Help tools that provide comprehensive information about Modbus can be found in the web user interface under

 **Tools > Service > Modbus**

- Generate control commands for BMS
- Display information on all available Modbus registers
- Generate Modbus documentation of all available Modbus registers of the connected devices

The Modbus TCP server supports the following function codes:

- Function code **0x03** (Read Holding Registers)
- Function code **0x04** (Read Input Registers)
- Function code **0x10** (Preset Multiple Registers)

The Modbus TCP server generates a function-related response to requests and sends it back to the Modbus TCP client.

7.1 Modbus requests

The required data of the system image are read from the COMTRAXX® device using the function codes **0x03** and **0x04**. For this purpose, the start address and the number of the registers to be read have to be entered. In addition, registers can also be written using function code **0x10**.

7.1.1 Example for function code 0x03

Configuration

- COMTRAXX® device in subsystem 1 with BCOM and BMS address 1
- BMS device on BMS interface with address 2

Task

- Read register 0x05 10 of the BMS device

| Byte | Name | Bender modbus image V1 | Bender modbus image V2 |
|-----------|------------------------|---|---|
| Byte 0, 1 | Transaction identifier | 0x00 00 | 0x00 00 |
| Byte 2, 3 | Protocol identifier | 0x00 00 | 0x00 00 |
| Byte 4, 5 | Length field | 0x00 06 | 0x00 06 |
| Byte 6 | Unit-ID | 0x02 Device address assignment (0x02 corresponds to the device address 2 of the subsystem) | 0x05 (address assignment via device assignment (0x05 = unit ID assigned by way of example for the device in the Modbus device assignment) |
| Byte 7 | Modbus function code | 0x03 | 0x03 |

| Byte | Name | Bender modbus image V1 | Bender modbus image V2 |
|-------------|------------------------|------------------------|------------------------|
| Byte 8, 9 | Register start address | 0x05 10 | 0x05 10 |
| Byte 10, 11 | Number of words | 0x00 01 | 0x00 01 |

7.1.2 Example for function code 0x04

Configuration

- COMTRAXX® device in subsystem 1 with BCOM and BMS address 1
- BMS device on BMS interface with address 2

Task

- Read measured value from channel 1 of the BMS device

| Byte | Name | Bender Modbus image V1 | Bender Modbus image V2 |
|-------------|------------------------|--|--|
| Byte 0, 1 | Transaction identifier | 0x00 00 | 0x00 00 |
| Byte 2, 3 | Protocol identifier | 0x00 00 | 0x00 00 |
| Byte 4, 5 | Length field | 0x00 06 | 0x00 06 |
| Byte 6 | Unit-ID | 0x01 Address assignment of the subsystem (0x01 corresponds to subsystem address 1) | 0x0A Address assignment of the interface 0x0A = interface internal BMS |
| Byte 7 | Modbus function code | 0x04 | 0x04 |
| Byte 8, 9 | Register start address | 0x02 10 Start register (0x02 = device address 2; 0x10 = start register for channel 1) | 0x01 62 Start register (measured value channel 1) |
| Byte 10, 11 | Number of words | 0x00 02 | 0x00 02 |

7.1.3 Example for function code 0x10

Configuration

- COMTRAXX® device in subsystem 1 with BCOM and BMS address 1
- BMS device on BMS interface with address 2

Task

- Write value = 100 to register 0x05 10 of the BMS device

| Byte | Name | Bender Modbus image V1 | Bender Modbus image V2 |
|--------------|------------------------|--|--|
| Byte 0, 1 | Transaction identifier | 0x00 00 | 0x00 00 |
| Byte 2, 3 | Protocol identifier | 0x00 00 | 0x00 00 |
| Byte 4, 5 | Length field | 0x00 06 | 0x00 06 |
| Byte 6 | Unit-ID | 0x01 Address assignment of the subsystem (0x01 corresponds to subsystem address 1) | 0x0A Address assignment of the interface (0x0A = interface internal BMS) |
| Byte 7 | Modbus function code | 0x10 | 0x10 |
| Byte 8, 9 | Register start address | 0x05 10 | 0x05 10 |
| Byte 10, 11 | Number of registers | 0x00 01 | 0x00 01 |
| Byte 12 | Number of registers x2 | 0x02 | 0x02 |
| Byte 13 - xx | Values | 0x64 | 0x64 |

7.2 Modbus responses

The responses consist of 2 bytes per register. The byte sequence is MSB (Most Significant Bit, Big Endian) first.

7.2.1 Responses for function code 0x03 and 0x04

| Byte | Name | Example |
|-------------|------------------------|----------------------------|
| Byte 1...6 | Identical with request | |
| Byte 7 | Modbus function code | 0x03 or 0x04 |
| Byte 8 | Byte count | 0x04 |
| Byte 9, 10 | Value register 0 | 0x12 34 (fictitious value) |
| Byte 11, 12 | Value register 1 | 0x23 45 (fictitious value) |

7.2.2 Responses for function code 0x10

| Byte | Name | Beispiel |
|-------------|------------------------|----------------------------|
| Byte 1...6 | Identical with request | |
| Byte 7 | Modbus function code | 0x10 |
| Byte 8, 9 | Register start address | 0x12 34 (fictitious value) |
| Byte 10, 11 | Number of registers | 0x00 12 (fictitious value) |

7.2.3 Exception code

If a request cannot be answered for whatever reason, the Modbus TCP server sends an exception code with which possible faults can be narrowed down.

Overview of exception codes

| Exception code | Description |
|----------------|--|
| 0x01 | Impermissible function |
| 0x02 | Impermissible data access |
| 0x03 | Impermissible data value |
| 0x04 | Slave device error |
| 0x05 | Acknowledgement of receipt (response delayed) |
| 0x06 | Request not accepted (repeat request if necessary) |
| 0x08 | Memory: Parity Error |
| 0x0A | Gateway path not available |
| 0x0B | Gateway error |

Structure of the exception code

| Byte | Name | Example |
|------------|------------------------|---------|
| Byte 1...6 | Identical with request | |
| Byte 7 | Modbus function code | 0x84 |
| Byte 8 | Exception code | |

7.3 Modbus system image

The COMTRAXX® device stores a system image in the internal memory. This shows the present values and states of all devices that are connected via the device. The system image depends on which Bender Modbus image (V1 or V2) is active on the COMTRAXX® device.

Starting from COMTRAXX® version V4.00, address assignment by interfaces is introduced. Each interface now has its own address range. This means that there can be several devices with the same device address in the system if they are connected via different interfaces.

7.4.2 Querying data with Modbus function code 0x04

The system image in the memory of the COMTRAXX® device can be read using the Modbus function code **0x04** (Read Input Registers).

The following information is available for all devices in the system:

- Device name
- Channel states
- Alarm and operating messages

The unit ID refers to the subsystem address.


The volume of the queried data depends on the number of bytes selected in the Modbus client used. Up to 125 words (0x7D) can be read with a single query. An individual word can also be read, for example, to detect the set bit for a saved common alarm.

7.4.3 Writing data with Modbus function code 0x10

The parameters of all devices located in the same subsystem can be written using the Modbus function code **0x10** (Preset Multiple Registers). This is only possible at subsystem level, but not in the whole system. The unit ID refers to the respective device address.



To make it easier to configure device parameters via Modbus TCP, the register addresses for each parameter can be displayed in the device menus. Activate this function at the menu item

 **Tools > Service > Parameter addresses**

7.4.4 Distribution of the memory areas

| Memory utilisation | Start address | End of memory area | Size of memory area |
|------------------------------------|---------------|--------------------|---------------------|
| Reference values for test purposes | 0x0000 | 0x00FF | 0x0100 |
| System image | 0x0100 | 0x95FF | 0x9500 |
| Not used | 0x96FF | 0xFFFF | 0x6900 |



*For some Modbus clients an offset of 1 must be added to the register addresses.
Example: process image start address = 0x0101.*

The assignment of the memory addresses and the associated memory content for one subsystem is described below. Please refer also to the "BCOM" manual, which provides information about the entire addressable system.

7.4.5 Memory scheme of the system image

Structure of the system image

As illustrated in the table, the Modbus start address for the respective system image is derived from the device address.

256 (0x100) words or 512 bytes are reserved for each device. They contain all information requested and transmitted on the interface.

Modbus start addresses for each device for which a request can be sent (V1)

| Modbus address ranges of the process images in the memory | | | |
|---|-------------|-----------------|-----|
| Device address | Word | | |
| | HiByte | LoByte | |
| | | 00 | ... |
| 1 | 0x01 | Device 1 | |
| 2 | 0x02 | Device 2 | |
| 3 | 0x03 | Device 3 | |
| ... | ... | ... | |
| 32 | 0x20 | Device 32 | |
| ... | ... | ... | |
| 255 | 0xFF | Device 255 | |

7.4.6 Memory scheme of an individual device

Devices can feature various types of analogue and/or digital channels. Please note the device-specific differences:

- BMS devices usually feature 12 channels
- MK800/TM800 supports up to 64 digital channels in the master mode

After determining the start address, the following unit parameters can be queried:

- Device type
- Timestamp
- Common alarm
- Device error
- Channel information

7.4.7 Example: Determine start address

Channel 2 des Geräts mit der Adresse 3 soll abgefragt werden. Wie wird die Start-Adresse zur Abfrage des Channels gebildet? Für dieses Beispiel sind die relevanten Zellen *fett* Channel 2 of the device with address 3 is to be queried. How is the start address determined to send the query for the channel? In our example, the relevant cells in the table are marked in **bold**.

1. For device address 3, the first address part 0x03 (HiByte) is taken from Tab. 7: Modbus start addresses for each device for which a request can be sent (V1).
2. For channel 2, the second address part 0x14 (LoByte) is taken from Tab. 8: Modbus address assignment of the channels in a device (V1).
3. For the number of words to be queried, the number 4 is taken from the same table: (0x14 to 0x17 = 0x04).
4. The start address 0x0314 is formed by HiByte and LoByte

Modbus address assignment of the channels in a device (V1)

| Memory image of a device | | | | | | | | | | | | | | | | | |
|--------------------------|-------------|-----------|-----------|------------------|-----------|-----------|-----------|------------|-----------|-----------|------------|-----------|-----------|-----------|-------|-----------|--|
| LoByte | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F | |
| 0x00 | Device type | | | | | | | | | Timestamp | | | | C | D | R | |
| 0x10 | Channel 1 | | | Channel 2 | | | | Channel 3 | | | Channel 4 | | | | | | |
| 0x20 | Channel 5 | | | Channel 6 | | | | Channel 7 | | | Channel 8 | | | | | | |
| 0x30 | Channel 9 | | | Channel 10 | | | | Channel 11 | | | Channel 12 | | | | | | |
| 0x40 | Channel 13 | | | Channel 14 | | | | Channel 15 | | | Channel 16 | | | | | | |
| 0x50 | Channel 17 | | | Channel 18 | | | | Channel 19 | | | Channel 20 | | | | | | |
| 0x60 | Channel 21 | | | Channel 22 | | | | Channel 23 | | | Channel 24 | | | | | | |
| 0x70 | Channel 25 | | | Channel 26 | | | | Channel 27 | | | Channel 28 | | | | | | |
| 0x80 | Channel 29 | | | Channel 30 | | | | Channel 31 | | | Channel 32 | | | | | | |
| 0x90 | 33 34 | 35 36 | 37 38 | 39 40 | 41 42 | 43 44 | 45 46 | 47 48 | 49 50 | 51 52 | 53 54 | 55 56 | 57 58 | 59 60 | 61 62 | 63 64 | |
| 0xA0 | Reserved | | | | | | | | | | | | | | | | |
| 0xB0 | Reserved | | | | | | | | | | | | | | | | |
| 0xC0 | Reserved | | | | | | | | | | | | | | | | |
| 0xD0 | Reserved | | | | | | | | | | | | | | | | |
| 0xE0 | Reserved | | | | | | | | | | | | | | | | |
| 0xF0 | Reserved | | | | | | | | | | | | | | | | |

Hex representation:

horizontal = units

vertical = sixteens

Abbreviations for memory contents:

C = Common alarm

D = Device lost (device failure)

R = Reserved

7.4.8 Data formats

Device type

The device type is set using a bus scan.

Data format device type

| Word 0x00 | 0x01 | 0x02 | 0x03 | 0x04 | 0x05 | 0x06 | 0x07 | 0x08 | 0x09 |
|-------------------------------|------|------|------|------|------|------|------|------|------|
| ASCII text, 10 Words/20 Bytes | | | | | | | | | |

Timestamp

The timestamp is set according to a datagram received from a transmitting device.

Data format time stamp

| Word 0x0A | | 0x0B | | 0x0C | | 0x0D | |
|------------|--------|-------------|-----------|------------|--------------|--------------|----------|
| HiByte | LoByte | HiByte | LoByte | HiByte | LoByte | HiByte | LoByte |
| Year YY | | Month MM | Day DD | Hour hh | Minute mm | Second ss | Reserved |

C = Common alarm and D = Device lost (device failure)

Data format common alarm and device failure

| Word 0x0E | |
|------------------------------------|------------------------------------|
| HiByte | LoByte |
| C | D |
| Common alarm, 1 byte: LSB = 0 or 1 | Device error, 1 byte: LSB = 0 or 1 |

The common alarm bit is set as soon as an alarm status from the respective device is detected.

The device error bit is set when the communication with the respective device is no longer possible.

Channels 1...32 with analogue and/or digital values

Every analogue device channel can contain alarm messages, operating messages, measured values, test messages and descriptive text.

Both analogue and digital information can be transmitted.

- A&T = Alarm-Typ and Test-Art (internal/external)
- R&U = Range and unit

For details on the channel description refer to "Channel descriptions for the process image (V1 and V2)", Page 76.

Channels 1...32: Data format analogue/digital values

| Word 0x00 | | 0x01 | | 0x02 | | 0x03 | |
|-------------------------------------|--------|--------|--------|----------------|----------------|----------------------------|--------|
| HiByte | LoByte | HiByte | LoByte | HiByte | LoByte | HiByte | LoByte |
| Floating point value (Float) | | | | A&T | R&U | Channel description | |

Float = Floating point value of the channels

Channels 1...32: Data format floating point values

| Word | 0x00 | | | | | | | | | | | | | | | | 0x10 | | | | | | | | | | | | | | | | | |
|------|--------|----|---|---|---|---|---|----|--------|---|---|---|---|---|---|----|--------|---|---|---|---|---|---|---|--------|---|---|---|---|---|---|---|---|---|
| Byte | HiByte | | | | | | | | LoByte | | | | | | | | HiByte | | | | | | | | LoByte | | | | | | | | | |
| Bit | 31 | 30 | | | | | | 24 | 23 | | | | | | | 16 | 15 | | | | | | | 8 | 7 | | | | | | | | | 0 |
| | S | E | E | E | E | E | E | E | E | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | |

Representation of the bit order for processing analogue measured values according to IEEE 754

S = Sign

E = Exponent

M = Mantissa

A&T = Alarm type and test type (internal/external)

The alarm type is coded by the bits 0...2.

The bits 3 and 4 are reserved and always have the value 0.

Bit 5 usually has the value 0 and represents the digital value of the status (this column is only relevant for the SMI472).

Bit 6 or 7 are usually set when an internal or external test has been completed. Other values are reserved.

The complete byte is calculated from the sum of the alarm type and the test type.

Channels 1...32: Data format A&T

| Bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | Description |
|------------|----|----|----|----|----|----|----|---|---|
| | a) | b) | c) | d) | d) | e) | f) | | |
| Alarm type | - | - | - | - | - | 0 | 0 | 0 | No alarm |
| | - | - | - | - | - | 0 | 0 | 1 | Prewarning |
| | 0 | 0 | - | - | - | 0 | 1 | 0 | Device error |
| | - | - | - | - | - | 0 | 1 | 1 | Reserved |
| | - | - | - | - | - | 1 | 0 | 0 | Alarm (yellow LED), e.g. insulation fault |
| | - | - | - | - | - | 1 | 0 | 1 | Alarm (red LED) |
| | - | - | - | - | - | 1 | 1 | 0 | Reserved |
| | - | - | - | - | - | 1 | 1 | 1 | Reserved |
| Test | 0 | 0 | - | - | - | - | - | - | No test |
| | 0 | 1 | - | - | - | - | - | - | Internal test |
| | 1 | 0 | - | - | - | - | - | - | External test |

a) = External test

b) = Internal test

c) = Status

d) = Reserved

e) = Alarm

f) = Error

R&U = Range and Unit

The unit is coded in the bits 0...4.

Bit 5 is reserved.

The bits 6 and 7 describe the range of validity of a value.

The complete byte is calculated from the sum of the unit and the range of validity.

Channels 1...32: Data format R&U

| Bit | 7 | 5 | 5 | 4 | 3 | 2 | 1 | 0 | Description |
|-------------------|---|---|---|-----|-----|-----|-----|-------|----------------------------|
| Unit | - | - | - | 0 | 0 | 0 | 0 | 0 | Invalid(init) |
| | - | - | - | 0 | 0 | 0 | 0 | 1 | No unit |
| | - | - | - | 0 | 0 | 0 | 1 | 0 | Ω |
| | - | - | - | 0 | 0 | 0 | 1 | 1 | A |
| | - | - | - | 0 | 0 | 1 | 0 | 0 | V |
| | - | - | - | 0 | 0 | 1 | 0 | 1 | % |
| | - | - | - | 0 | 0 | 1 | 1 | 0 | Hz |
| | - | - | - | 0 | 0 | 1 | 1 | 1 | Baud |
| | - | - | - | 0 | 1 | 0 | 0 | 0 | F |
| | - | - | - | 0 | 1 | 0 | 0 | 1 | H |
| | - | - | - | 0 | 1 | 0 | 1 | 0 | °C |
| | - | - | - | 0 | 1 | 0 | 1 | 1 | °F |
| | - | - | - | 0 | 1 | 1 | 0 | 0 | Second |
| | - | - | - | 0 | 1 | 1 | 0 | 1 | Minute |
| | - | - | - | 0 | 1 | 1 | 1 | 0 | Hour |
| | - | - | - | 0 | 1 | 1 | 1 | 1 | Day |
| - | - | - | 1 | 0 | 0 | 0 | 0 | Month | |
| | - | - | - | 1 | ... | ... | ... | ... | Reserved |
| | - | - | - | 1 | 1 | 1 | 1 | 0 | CODE |
| | - | - | - | 1 | 1 | 1 | 1 | 1 | Reserved |
| | - | - | 1 | ... | ... | ... | ... | ... | |
| | - | - | 1 | 1 | 1 | 1 | 1 | 1 | |
| Range of validity | 0 | 0 | - | - | - | - | - | - | Actual value |
| | 0 | 1 | - | - | - | - | - | - | The actual value is lower |
| | 1 | 0 | - | - | - | - | - | - | The actual value is higher |
| | 1 | 1 | - | - | - | - | - | - | Invalid value |

i If the unit byte (0...4) refers to CODE, the recorded value or status will result in a text message.

The content of this text message is listed in the table "Channel descriptions for the process image (V1 and V2)", Page 76. The floating point value contains an internal CODE but no valid measured value.

Channel description

A code with the associated descriptive text is available for each channel. For a complete list of the available codes or texts refer to "Channel descriptions for the process image (V1 and V2)", Page 76.

Channels 33...64

The channels 33...64 only provide digital information. The information is coded as alarm or message type as well as test type (internal/external). The coding is similar to the A&T data format for channels 1...32 except for the additional bit 4, which is used for coding device errors, e.g. connection faults or internal device errors.

Channels 33...64: Data format A&T

| Bit | 7 | 5 | 5 | 4 | 3 | 2 | 1 | 0 | Description |
|-----------|----|----|----|----|----|----|----|---|---|
| | a) | b) | c) | d) | e) | f) | g) | | |
| Alarm-Typ | - | - | - | - | - | 0 | 0 | 0 | No alarm |
| | - | - | - | - | - | 0 | 0 | 1 | Prewarning |
| | 0 | 0 | - | - | - | 0 | 1 | 0 | Device error |
| | - | - | - | - | - | 0 | 1 | 1 | Reserved |
| | - | - | - | - | - | 1 | 0 | 0 | Alarm (yellow LED), e.g. insulation fault |
| | - | - | - | - | - | 1 | 0 | 1 | Alarm (red LED) |
| | - | - | - | - | - | 1 | 1 | 0 | Reserved |
| | - | - | - | - | - | 1 | 1 | 1 | Reserved |
| Test | 0 | 0 | - | - | - | - | - | - | No test |
| | 0 | 1 | - | - | - | - | - | - | Internal test |
| | 1 | 0 | - | - | - | - | - | - | External test |

a) = External test

b) = Internal test

c) = Status

d) = Device error

e) = Reserved

f) = Alarm

g) = Error

7.4.9 Modbus example for reading data (V1)

Example: Reading out from ATICS channel 1 (voltage line 1)

Reading out from ATICS channel 1 (voltage line 1) The COMTRAXX® device has address 1 in subsystem 1. ATICS channel 1 of internal address 3 is to be read out. The content is the voltage of line 1 as floating point value.

Modbus request for "reading data (V1)"

00 01 00 00 00 06 01 04 03 10 00 02

00 01 Transaction ID (is generated automatically)

00 00 Protocol ID

00 06 Length

| | |
|-------|---|
| 01 | Unit ID (subsystem 1) |
| 04 | Modbus Function Code 0x 04 (read input registers) |
| 03 10 | Start register (register address at which the value appears in the memory image: 784 = 0x 03 10) |
| 00 02 | Length of the data (words) |

Modbus response for "reading data (V1)"

00 01 00 00 00 05 01 04 04 01 00 43 63 00 04

| | |
|-------------|---|
| 00 01 | Transaction ID (is generated automatically) |
| 00 00 | Protocol ID |
| 00 05 | Length |
| 01 | Unit ID (device address of the COMTRAXX® device) |
| 04 | Modbus Function Code 0x 04 (read input registers) |
| 04 | Length of the data (bytes) |
| 01 00 43 63 | Data floating point value (0x 43 63 01 00 (words swapped) = 227.0039) |
| 00 04 | Alarm and test type (00 = no alarm), range and unit (04 = volts) |

7.4.10 Reference data records of the process image

To make it easier to check the configuration and the Modbus TCP data access to devices, the COMTRAXX® device provides a reference data record at the **virtual** address 0



No real device can have address 0! Address 0 only serves to simulate data access.

Special features of the Modbus communication are the byte offset and the word and byte order in the memory (Big Endian, MSB). At the end of this chapter, a few examples of correct configuration are given, which might be helpful.

7.4.11 Address assignment of the reference data record

As shown in the following table, the Modbus start address for access to the reference data record is derived from device address 0.

Start addresses for the reference data record query

| Virtual device address | Word | | | | |
|------------------------|--------|-------------|--------------|-----------|-----------|
| | HiByte | LoByte | | | |
| | | 00 | 0E | 10 | 14 |
| 0 | 0x00 | Device type | Common alarm | Channel 1 | Channel 2 |

The start addresses provide the following reference values

0x0000: TEST (device type)

0x000E: 1 (common alarm, LSB of the HiByte is set)

0x0010: 230 V undervoltage (reference value on channel 1)

0x0014: 12.34 A overcurrent (reference value on channel 2)

7.4.12 Reference value on channel 1

The following reference value is stored in this channel: 230.0 V undervoltage

Stored reference data (channel 1)

| Word 0x10 | | 0x11 | | 0x12 | | 0x13 | |
|------------------------------|--------|--------|--------|--------------|-------------|---------------------|--------|
| HiByte | LoByte | HiByte | LoByte | HiByte | LoByte | HiByte | LoByte |
| 0x43 | 0x66 | 0x00 | 0x00 | 0x00 | 0x04 | 0x00 | 0x4D |
| Floating point value (Float) | | | | A&T | R&U | Description | |
| 230.0 | | | | No/No | Volt | Undervoltage | |

7.4.13 Reference value on channel 2

The following reference value is stored in this channel: 12.34 A

Stored reference data (channel 2)

| Word 0x14 | | 0x15 | | 0x16 | | 0x17 | |
|-----------------------------|--------|--------|--------|--------------|---------------|--------------------|--------|
| HiByte | LoByte | HiByte | LoByte | HiByte | LoByte | HiByte | LoByte |
| 0x41 | 0x45 | 0x70 | 0xA4 | 0x00 | 0x03 | 0x00 | 0x4A |
| Floating point value(Float) | | | | A&T | R&U | Description | |
| 12.34 | | | | No/No | Ampere | Overcurrent | |

7.4.14 Explanation of how to access floating point values

The test value 12.34 can be read out via Modbus TCP using the Modbus function code **0x04** at the address 0x0014. The test value has a size of 2 words.

Proceed as follows:

1. **Determine the correct byte offset**

Interpreting both words as unsigned integer values should result in the following values: Word 1 with address 0x14: unsigned integer value => 16709 (0x4145) Word 2 with address 0x15: unsigned integer value => 28836 (0x70A4)

2. **Determine the correct byte or word swap**

There are four different combinations of swapping. The only correct value is 12.34. All swapping combinations are represented in the following table:

| Hex value sequence | Word 1 | | Word 2 | | Floating point value |
|--------------------|-----------------|-----------------|-----------------|-----------------|----------------------|
| | Byte 1 | Byte 2 | Byte 3 | Byte 4 | |
| CORRECT | A 41 | B 45 | C 70 | D A4 | 12.34 |
| Word swapping | C 70 | D A4 | A 41 | B 45 | 4.066E+29 |

| Hex value sequence | Word 1 | | Word 2 | | Floating point value |
|------------------------|---------|---------|---------|---------|----------------------|
| | Byte 1 | Byte 2 | Byte 3 | Byte 4 | |
| Byte swapping | B 45 | A 41 | D A4 | C 70 | 3098.27 |
| Word and byte swapping | D A4 | C 70 | B 45 | A 41 | -5.21E-17 |

7.5 Bender Modbus image V2

(one address range for each interface)

If the Bender Modbus image is set to V2, the Modbus data are provided as follows.

7.5.1 Function codes (V2)

Function code 0x03 (Read Holding Registers):

Querying data from the Modbus device assignment table

- **Reading** the parameters and measured values of all devices in the system
- Modbus device assignment must be performed before use, because the unit ID in the Modbus request refers to the respective unit ID assigned in the Modbus device assignment.
- The device assignment determines which devices are accessible via **0x03**.
- 255 addresses are available, which can be configured freely.
- The device assignment takes place in the COMTRAXX® device at


 **Device management > Device assignment > Modbus.**

Function code 0x10 (Write Multiple Registers):


Writing data

Writing the parameters of all devices in the subsystem


For the Modbus request, the unit ID refers to the interface via which the corresponding device is integrated.


 *To set parameters for devices via Modbus TCP, a device assignment must first be made in order to obtain unique unit IDs:*

Um eine Parametrierung von Geräten über Modbus TCP durchzuführen, muss zunächst eine Gerätezuordnung vorgenommen werden, um eindeutige Unit-IDs zu erhalten:

 **Tools > Device management > Device assignment > Modbus.**

Note that there may be a time delay of up to 3 minutes in BMS bus operations before changes become visible.

 *To make it easier to configure device parameters via Modbus TCP, the register addresses for each parameter can be displayed in the device menus. Activate this function at the menu item*

 **Tools > Service > Parameter addresses**

Function code 0x04 (Read Input Registers):
Querying data from the system image

- **Reading** the system image from the COMTRAXX® device memory.
- Querying device names, channel states, alarm and operating messages from all devices connected via the COMTRAXX® device.
- Here, the unit ID refers to the interface via which the corresponding device is connected.
- The volume of the queried data depends on the number of bytes selected in the Modbus client used.
- Up to 125 words (0x7D) can be read with a single query.

7.5.2 Distribution of the memory areas (V2)

| Unit-ID | Interface | Maximum No. of devices | Measuring points per device | Register per device | Device/Register per unit ID | Device/Register last unit ID | Start address | End address |
|-----------------------------|------------------------------|------------------------|-----------------------------|---------------------|-----------------------------|------------------------------|-----------------|---------------------|
| 1 | COMTRAXX® device information | 1 | 550 | 8880 | 1/8880 | - | 0 | 8879 |
| 10 | Internal BMS | 150 | 12 | 272 | 150 / 40800 | - | 0 | 40799 |
| 20... 28 | Modbus RTU | 247 | 128 | 2128 | 30 / 63840 | 7 / 14896 | 0 (per unit ID) | 14895 (Unit-ID 28) |
| 40... 48 | Modbus TCP | 247 | 128 | 2128 | 30 / 63840 | 7 / 14896 | 0 (per unit ID) | 14895 (Unit-ID 48) |
| 60... 68 | BCOM | 255 | 128 | 2128 | 30 / 63840 | 15 / 31920 | 0 (per unit ID) | 31919 (Unit-ID 68) |
| 90... 91 | Virtual devices | 255 | 16 | 336 | 195 / 65520 | 60 / 20160 | 0 (per unit ID) | 20159 (Unit-ID 91) |
| 95 | I ² C | 127 | 16 | 336 | 127 / 42672 | - | 0 | 42671 |
| 101... 199 ¹⁾ | ²⁾ | 150 per unit ID | 12 | 272 | 150 / 40800 | - | 0 (per unit ID) | 40799 (Unit-ID 199) |

¹⁾ Only for devices with the corresponding interface; otherwise: reserved

²⁾ External BMS: Here, the unit ID represents an external BMS address .
BMSe Addr. 10 = unit ID 110



*For some Modbus clients an offset of 1 must be added to the register addresses.
Example: process image start address = 0x0101.*

7.5.3 Memory scheme of the system image (V2)

Structure of the system image

As illustrated in the table, the Modbus start address for the respective system image is derived from the device address. It contains all information requested and transmitted on the interface

Example: Internal BMS

| Unit ID | Device address | Modbus address ranges of the data in the memory | |
|---------|----------------|---|-----------------------|
| | | Start register | End register |
| 10 | 1 | 0 (272 x 0) | 271 (272 x 1 - 1) |
| 10 | 2 | 272 (272 x 1) | 543 (272 x 2 - 1) |
| 10 | 3 | 544 (272 x 2) | 815 (272 x 3 - 1) |
| ... | | | |
| 10 | 30 | 7888 (272 x 29) | 8159 (272 x 30 - 1) |
| 10 | 31 | 8160 (272 x 30) | 8431 (272 x 31 - 1) |
| ... | | | |
| 10 | 150 | 40528 (272 x 149) | 40799 (272 x 150 - 1) |

Example: Modbus TCP

| Unit ID | Device address | Modbus address ranges of the data in the memory | |
|---------|----------------|---|------------------------|
| | | Start register | End register |
| 40 | 1 | 0 (2128 x 0) | 2127 (2128 x 1 - 1) |
| 40 | 2 | 2128 (2128 x 1) | 4255 (2128 x 2 - 1) |
| 40 | 3 | 4256 (2128 x 2) | 6383 (2128 x 3 - 1) |
| ... | | | |
| 40 | 30 | 61712 (2128 x 29) | 63.839 (2128 x 30 - 1) |
| 40 | 31 | 0 (2128 x 0) | 2127 (2128 x 1 - 1) |
| ... | | | |
| 40 | 247 | 12768 (2128 x 6) | 14.895 (2128 x 7 - 1) |

7.5.4 Memory scheme of a device (V2)

Example: Memory scheme V2: Device internal BMS

Each device is managed via an individual device image in the memory. Its first block provides the device information. Afterwards, the individual measured value/channel information is displayed. The size of the block depends on how many measured values a device provides.

Device (V2)

Default values in case no values are available for the requested register:

- UINT16: 65.535 (all bits are set)
- UINT32: 4.294.967.295 (all bits are set)
- String: empty string (value 0)
- Float: NaN (all bits are set)

| Offset | Hex | Type | Length in Words | Extended description |
|--------|-----|--------|-----------------|--|
| 0 | 0 | String | 10 | Device name |
| 10 | A | String | 10 | Serial number of the device |
| 20 | 14 | UINT32 | 2 | Last contact (time stamp in seconds since 01.01.1970) |
| 22 | 16 | UINT16 | 1 | Device status 2 = Inactive (Device is not active. However, devices connected to this device are monitored for failure) 3 = Active (Device is active) 4 = Lost (Device is not active but is monitored for failure) |
| 23 | 17 | UINT16 | 1 | Sum of all messages (alarm, warning, prewarning, device error) |
| 24 | 18 | UINT16 | 1 | Number of alarms |
| 25 | 19 | UINT16 | 1 | Number of warnings |
| 26 | 1A | UINT16 | 1 | Number of prewarnings |
| 27 | 1B | UINT16 | 1 | Number of device errors |
| 28 | 1C | UINT16 | 52 | Individual device range, the content depends on the respective device |
| | | | Sum = 80 | |

Example: Memory scheme V2: Device internal BMS

| Description | Words |
|--------------------|---|
| Device information | 80 |
| Measured values | 192 (12 channels x 16 words per channel)) |
| Total | 272 |

Measured value (V2)

| Offset | Hex | Type | Length in words | Extended description |
|--------|-----|--------|-----------------|--|
| 0 | 0 | UINT32 | 2 | Time stamp in seconds since 01.01.1970 |
| 2 | 2 | Float | 2 | Measured value (NaN if not valid) |
| 4 | 4 | Float | 2 | Response value (not available for every device; if not available, NaN) |

| Offset | Hex | Type | Length in words | Extended description |
|--------|-----|--------|-----------------|--|
| 6 | 6 | Float | 2 | Response value for prewarning (not available for every device; if not available, NAN) |
| 8 | 8 | UINT16 | 1 | Alarm type 0 = None 1 = Prewarning 2 = Fault 4 = Warning 5 = Alarm |
| 9 | 9 | UINT16 | 1 | Unit 1 = None 2 = Ohm 3 = Ampere 4 = Volt 5 = Percent 6 = Hertz 7 = Baud 8 = Farad 9 = Henry 10 = °Celsius 11 = °Fahrenheit 12 = Second 13 = Minute 14 = Hour 15 = Day 16 = Month 17 = Watt 18 = var 19 = VA 20 = Wh 21 = varh 22 = VAh 23 = Degree 24 = HertzPerSecond 25 = NonewithConvert 26 = Bar 30 = Textcode |
| 10 | A | UINT16 | 1 | Range of validity 0 = Actual value 1 = Actual value is lower < 2 = Actual value is higher > 3 = Invalid value |
| 11 | B | UINT16 | 1 | Test 0 = None 1 = Internal 2 = External |
| 12 | C | UINT16 | 1 | Description |

| Offset | Hex | Type | Length in words | Extended description |
|--------|-----|--------|-----------------|--|
| 13 | D | UINT16 | 1 | Reserved (0xFFFF) |
| 14 | E | UINT16 | 1 | Compressed channel state Bit coded 1 = Message present 2 = Prewarning 4 = Fault/Alarm/Warning 8 = Internal test 16 = External test |
| 15 | F | | 1 | Reserved |
| | | | Sum = 16 | |

7.5.5 Modbus example for reading data (V2)

Example: Reading out from ATICS channel 1 (voltage line 1)

The COMTRAXX® device has address 1 in subsystem 1.

Channel 1 of an ATICS is to be read out at the internal BMS with address 3. The content is the voltage of line 1 as floating point value.

Modbus request for "reading data (V2)"

00 01 00 00 00 06 0A 04 02 72 00 02

00 01 Transaction ID (is generated automatically)
 00 00 Protocol ID
 00 06 Length
 0A Unit-ID (internal BMS)
 04 Modbus Function Code 0x 04 (read input registers)
 02 72 Start register (272 [words per device] * 2 [address 3] + 82 [Start register measured value channel 1])
 00 02 Length of the data (words)

Modbus response for "reading data (V2)"

00 01 00 00 00 05 0A 04 04 01 00 43 63 00 04

00 01 Transaction ID (is generated automatically)
 00 00 Protocol ID
 00 05 Length
 0A Unit-ID (internal BMS)
 04 Modbus Function Code 0x 04 (read input registers)
 04 Length of the data (bytes)
 01 00 43 63 Data floating point value (0x 43 63 01 00 (words swapped) = 227.0039)
 00 04 Alarm and test type (00 = no alarm), range and unit (04 = volts)

7.5.6 Reference data records of the system image (V2)

To check the configuration and the Modbus TCP data access, internal registers of the COMTRAXX® device can be retrieved with function code **0x04**.

Address assignment of the reference data record

Information on the COMTRAXX® device can be retrieved in the following registers. This can be used to check the configuration and the Modbus TCP data access to the device.

| Modbus address ranges of the data in the memory | | | | | | |
|---|---------|----------------|----------------|--------------|--------|----------|
| Content | Unit-ID | Device address | Start register | End register | Type | Length |
| Device name | 1 | 1 | 0x00 00 | 0x00 09 | String | 10 words |
| Serial number | 1 | 1 | 0x00 0A | 0x00 13 | String | 10 words |

7.6 Channel descriptions for the process image (V1 and V2)

Channel descriptions for the process image

| Value | Measured value description Alarm message Operating message | Description |
|-----------|--|--|
| 1 (0x01) | Insulation fault | |
| 2 (0x02) | Overload | |
| 3 (0x03) | Overtemperature | |
| 4 (0x04) | Failure line 1 | |
| 5 (0x05) | Failure line 2 | |
| 6 (0x06) | Insul. OT light | Insulation fault operating theatre light |
| 7 (0x07) | | |
| 8 (0x08) | Distribution board failure | |
| 9 (0x09) | Failure oxygen | |
| 10 (0x0A) | Failure vacuum | |
| 11 (0x0B) | Anaesthetic gas | |
| 12 (0x0C) | Compressed air 5 bar | |
| 13 (0x0D) | Compressed air 10 bar | |
| 14 (0x0E) | Failure nitrogen | |
| 15 (0x0F) | Failure CO2 | |
| 16 (0x10) | Insulation UPS | Insulation fault UPS |
| 17 (0x11) | Overload UPS | |
| 18 (0x12) | Converter UPS | |
| 19 (0x13) | UPS fault | |
| 20 (0x14) | UPS emergency peration | |
| 21 (0x15) | UPS test run | |

| Value | Measured value description Alarm message Operating message | Description |
|--------------|---|--|
| 22 (0x16) | Failure air conditioning | |
| 23 (0x17) | Batt.op. OP-L | Battery-operated operating theatre light |
| 24 (0x18) | Batt.op. OP-S | Battery-operated Sat operating theatre light |
| 25 (0x19) | Fail.norm.supply | Line normal power supply |
| 26 (0x1A) | Fail.safet.supply | Line safety power supply |
| 27 (0x1B) | Failure UPS | Line additional safety power supply |
| 28 (0x1C) | Ins.safety supply | |
| 29 (0x1D) | Fail.N conductor | |
| 30 (0x1E) | Short dist. panel | Distribution panel short circuit |
| 31 (0x1F) | Reserved | |
| 32 (0x20) | | |
| 33 (0x21) | | |
| 34 (0x22) | | |
| 35 (0x23) | Standby function | (Measuring function switched off (standby)) |
| 36 (0x24) | | |
| 37 (0x25) | | |
| 38 (0x26) | Batt.op. UPS | Battery operation, special safety power supply |
| 39 (0x27) | Phase sequ. left | |
| 40 (0x28) | Failure line BPS | Battery-supported safety power supply |
| 41 (0x29) | Reserved | |
| ... | | |
| 66 (0x42) | | |
| 67 (0x43) | Function test until: | Date |
| 68 (0x44) | Service until: | Date |
| 69 (0x45) | Ins.fault locat. | Insulation fault location |
| 70 (0x46) | peak | Fault EDS system |
| 71 (0x47) | Insulation fault | Insulation resistance in W |
| 72 (0x48) | Current | Measured value in A |
| 73 (0x49) | Undercurrent | |
| 74 (0x4A) | Overcurrent | |

| Value | Measured value description Alarm message Operating message | Description |
|--------------|---|--|
| 75 (0x4B) | Residual current | Measured value in A |
| 76 (0x4C) | Voltage | Measured value in V |
| 77 (0x4D) | Undervoltage | |
| 78 (0x4E) | Overvoltage | |
| 79 (0x4F) | Frequency | Measured value in Hz |
| 80 (0x50) | Reserved | |
| 81 (0x51) | Unbalance | |
| 82 (0x52) | Capacitance | Measured value in F |
| 83 (0x53) | Temperature | Measured value in °C |
| 84 (0x54) | Overload | Measured value in % |
| 85 (0x55) | Digital input | State 0 or 1 |
| 86 (0x56) | Insulation fault | Impedance |
| 87 (0x57) | Insulation fault | Alarm from an insulation fault locator |
| 88 (0x58) | Load | Measured value in % |
| 89 (0x59) | Total Hazard Current | THC |
| 90 (0x5A) | Inductance | Measured value in H |
| ... | Reserved | |
| 97 (0x61) | Service code | Information about service intervals |
| ... | Reserved | |
| 101 (0x65) | Mains power connection | |
| 102 (0x66) | Earth connection | |
| 103 (0x67) | Short-circuit transformer | CT short circuit |
| 104 (0x68) | No CT connected | |
| 105 (0x69) | Short temp.sensor | Temperature sensor short circuit |
| 106 (0x6A) | Temp.sensor open. | Connection temperature sensor |
| 107 (0x6B) | K1 | Fault contactor K1 |
| 108 (0x6C) | K2 | Fault contactor K2 |
| 109 (0x6D) | Reserved | |
| 110 (0x6E) | | |
| 111 (0x6F) | No address: | Failure BMS device |
| 112 (0x70) | Reserved | |

| Value | Measured value description Alarm message Operating message | Description |
|--------------|---|---|
| 113 (0x71) | Failure K1/Q1 | Failure contactor K1/Q1 |
| 114 (0x72) | Failure K2/Q2 | Failure contactor K2/Q2 |
| 115 (0x73) | Device error | Fault ISOMETER |
| 116 (0x74) | Manual mode K1/2 | Manual mode |
| 117 (0x75) | Open circuit K1 on | Line to K1 interrupted on |
| 118 (0x76) | Open circuit K1 off | Line to K1 interrupted off |
| 119 (0x77) | Open circuit K2 on | Line to K2 interrupted on |
| 120 (0x78) | Open circuit K2 off | Line to K2 interrupted off |
| 121 (0x79) | K/Q1 on | Fault |
| 122 (0x7A) | K/Q1 off | Fault |
| 123 (0x7B) | K/Q2 on | Fault |
| 124 (0x7C) | K/Q2 off | Fault |
| 125 (0x7D) | FailureK3 | |
| 126 (0x7E) | Q1 | Fault |
| 127 (0x7F) | Q2 | Fault |
| 128 (0x80) | No master | |
| 129 (0x81) | Device error | |
| 130 (0x82) | Reserved | |
| 131 (0x83) | Fault RS485 | |
| 132 (0x84) | Reserved | |
| 133 (0x85) | | |
| 134 (0x86) | | |
| 135 (0x87) | | |
| 136 (0x88) | | |
| 137 (0x89) | Short circuit Q1 | |
| 138 (0x8A) | Short circuit Q2 | |
| 139 (0x8B) | CV460 | CV460 fault |
| 140 (0x8C) | RK4xx | Fault RK4xx |
| 141 (0x8D) | Address collision | BMS address has been assigned several times |
| 142 (0x8E) | Invalid address | |
| 143 (0x8F) | Several masters | |

| Value | Measured value description Alarm message Operating message | Description |
|--------------|---|--------------------------|
| 144 (0x90) | No menu access | |
| 145 (0x91) | Own address | |
| ... | Reserved | |
| 201 (0xC9) | Line 1 normal op | |
| 202 (0xCA) | Line 2 normal op | |
| 203 (0xCB) | Switch. el. 1 on | |
| 204 (0xCC) | Switch. el. 2 on | |
| 205 (0xCD) | Reserved | |
| 206 (0xCE) | Auto mode | |
| 207 (0xCF) | Manual mode | |
| 208 (0xD0) | Reserved | |
| 209 (0xD1) | | |
| 210 (0xD2) | Line AV on | |
| 211 (0xD3) | Line SV on | |
| 212 (0xD4) | Line UPS on | |
| 213 (0xD5) | Channel disabled | |
| 214 (0xD6) | Switch-back lock | Switch-back lock enabled |
| 215 (0xD7) | Phase sequ. right | |
| 216 (0xD8) | Switch. el. pos.0 | |
| 217 (0xD9) | Line BPS on | |
| 218 (0xDA) | On | SMO48x: Alarm, relay |
| 219 (0xDB) | Relay off | |
| 220 (0xDC) | Automatic test | |
| 221 (0xDD) | Initial measurement | |

| Value | Measured value description Alarm message Operating message | Description |
|--------------|---|--------------------|
| 256 (0x100) | DC offset voltage | |
| 257 (0x101) | Overtemperature coupling | |
| 258 (0x102) | Overtemp. PGH | |
| 259 (0x103) | ISONet active | |

| Value | Measured value description Alarm message Operating message | Description |
|--------------|---|--------------------|
| 260 (0x104) | Maximum count reached | |
| 261 (0x105) | THD | |
| 262 (0x106) | Insulation fault at L1 | |
| 263 (0x107) | Insulation fault at L2 | |
| 264 (0x108) | Insulation fault at L3 | |
| 265 (0x109) | Res. Hazard Current | |
| 266 (0x10A) | No. active EDS channels | |
| 267 (0x10B) | No. detected ins. faults | |
| 268 (0x10C) | No. resid. current faults | |
| 269 (0x10D) | Fault location | |
| 270 (0x10E) | Calibration | |
| 271 (0x10F) | U NGR(rms) limit exceeded | |
| 272 (0x110) | I NGR(rms) limit exceeded | |
| 273 (0x111) | Fault voltage U NGR (fundamental) | |
| | U NGR(fund) limit exceeded | |
| 274 (0x112) | I NGR(fund) limit exceeded | |
| 275 (0x113) | Line 3 operational | |
| 276 (0x114) | Failure line 3 | |
| 277 (0x115) | R NGR below threshold | |
| 278 (0x116) | R NGR above threshold | |
| 279 (0x117) | Earth fault L1 | |
| 280 (0x118) | Earth fault L2 | |
| 281 (0x119) | Earth fault L3 | |
| 282 (0x11A) | Fault phase L1 | |
| 283 (0x11B) | Fault phase L2 | |
| 284 (0x11C) | Fault phase L3 | |
| 285 (0x11D) | Locating current | |
| 286 (0x11E) | Switch. elem. 3 on | |
| 287 (0x11F) | Q3 | |
| 288 (0x120) | Switch. elem. 1 off | |
| 289 (0x121) | Switch. elem. 2 off | |

| Value | Measured value description Alarm message Operating message | Description |
|--------------|---|--------------------|
| 290 (0x122) | Switch. elem. 3 off | |
| 291 (0x123) | Wire break K3/Q3 on | |
| 292 (0x124) | Wire break K3/Q3 off | |
| 293 (0x125) | Fault K/Q3 on | |
| 294 (0x126) | Fault K/Q3 off | |
| 295 (0x127) | Connection monitoring auxiliary voltage switch | |
| 296 (0x128) | Bypass operation | |
| 297 (0x129) | Tripped | |
| 298 (0x12A) | Latched fault after device restart | |
| 299 (0x12B) | U NGR(harm) limit exceeded | |
| 300 (0x12C) | I NGR(harm) limit exceeded | |
| 301 (0x12D) | Restart | |
| 302 (0x12E) | Insulation resistance from DC shift voltage | |
| 303 (0x12F) | System error | |
| 304 (0x130) | | |
| 305 (0x131) | R NGR | |
| 306 (0x132) | R NGR relative | |
| 307 (0x133) | I NGR RMS | |
| 308 (0x134) | I NGR RMS relative | |
| 309 (0x135) | I NGR fundamental | |
| 310 (0x136) | I NGR fundamental relative | |
| 311 (0x137) | I NGR harmonics | |
| 312 (0x138) | I NGR harmonics relative | |
| 313 (0x139) | U NGR RMS | |
| 314 (0x13A) | U NGR RMS relative | |
| 315 (0x13B) | U NGR fundamental | |
| 316 (0x13C) | U NGR fundamental relative | |
| 317 (0x13D) | U NGR harmonics | |
| 318 (0x13E) | U NGR harmonics relative | |
| 319 (0x13F) | U(1-2) | |

| Value | Measured value description Alarm message Operating message | Description |
|--------------|---|--------------------|
| 320 (0x140) | U(2-3) | |
| 321 (0x141) | U(3-1) | |
| 322 (0x142) | U(1-E) | |
| 323 (0x143) | U(2-E) | |
| 324 (0x144) | U(3-E) | |
| 325 (0x145) | Method | |
| 326 (0x146) | R sense | |
| 327 (0x147) | Symmetrical alarm | |
| 328 (0x148) | OK | |
| 329 (0x149) | TEST | |
| 330 (0x14A) | Enable synchronous switchover | |
| 331 (0x14B) | Service profile | |
| 332 (0x14C) | Switch-on time Q1 | |
| 333 (0x14D) | Switch-off time Q1 | |
| 334 (0x14E) | Switch-on time Q2 | |
| 335 (0x14F) | Switch-off time Q2 | |
| 336 (0x150) | Switch-on time Q3 | |
| 337 (0x151) | Switch-off time Q3 | |
| 338 (0x152) | Prewarning | |
| 339 (0x153) | | |
| 340 (0x154) | | |
| 341 (0x155) | Peak demand | |
| 342 (0x156) | Quadrant | |
| 343 (0x157) | | |
| 344 (0x158) | TDD | |
| 345 (0x159) | TODD | |
| 346 (0x15A) | TEDD | |
| 347 (0x15B) | Demand | |
| 348 (0x15C) | Zero sequence | |
| 349 (0x15D) | Positive sequence | |
| 350 (0x15E) | Negative sequence | |

| Value | Measured value description Alarm message Operating message | Description |
|--------------|---|--------------------|
| 351 (0x15F) | Digital output | |
| 352 (0x160) | Deviation | |
| 353 (0x161) | Flicker Pst | |
| 354 (0x162) | Flicker Plt | |
| 355 (0x163) | Overdeviation | |
| 356 (0x164) | Underdeviation | |
| 357 (0x165) | Crest factor | |
| 358 (0x166) | All harmonics | |
| 359 (0x167) | Fundamental | |
| 360 (0x168) | TOHD | |
| 361 (0x169) | TEHD | |
| 362 (0x16A) | TIHD | |
| 363 (0x16B) | TOIHD | |
| 364 (0x16C) | TEIHD | |
| 365 (0x16D) | IHD | |
| 366 (0x16E) | Voltage dips | |
| 367 (0x16F) | Voltage swells | |
| 368 (0x170) | Voltage interruptions | |
| 369 (0x171) | Transients | |
| 370 (0x172) | Rapid voltage changes | |
| 371(0x173) | All PQ events | |
| 372 (0x174) | Demand forecast | |
| 373 (0x175) | Q1 not ready | |
| 374 (0x176) | Q2 not ready | |
| 375 (0x177) | Q3 not ready | |
| 376 (0x178) | Measured value counter | |
| 377 (0x179) | Alarm messages | |
| 378 (0x17A) | DC shift value in percent | |
| 379 (0x17B) | Demand import | |
| 380 (0x17C) | Demand export | |
| 381 (0x17D) | Max. this month | |

| Value | Measured value description Alarm message Operating message | Description |
|--------------|---|--------------------|
| 382 (0x17E) | Min. this month | |
| 383 (0x17F) | Max. last month | |
| 384 (0x180) | Min. last month | |
| 385 (0x181) | Generator switch-off delay | |
| 386 (0x182) | ISOSync active | |
| 387 (0x183) | Analogue input | |
| 388 (0x184) | Analogue output | |
| 389 (0x185) | brighter | |
| 390 (0x186) | darker | |
| 391 (0x187) | nominal value | |
| 392 (0x188) | actual value | |
| 393 (0x189) | | |
| 394 (0x18A) | | |
| 395 (0x18B) | Overload on current input | |
| 396 (0x18C) | DC immunity | |
| 397 (0x18D) | Field calibration failed | |
| 398 (0x18E) | Field calibration could not be started | |
| 399 (0x18F) | Autom. restart failed! | |
| 400 (0x190) | Failure alarm indicator panel | |
| 401 (0x191) | up | |
| 402 (0x192) | down | |
| 403 (0x193) | The EDSSync configuration is not consistent! | |
| 404 (0x194) | BCOM connection interrupted! | |
| 405 (0x195) | The EDSSync configuration was not found! | |
| 406 (0x196) | Distribution of EDSSync configuration has failed! | |
| 407 (0x197) | The EDSSync configuration is faulty! | |
| 408 (0x198) | EDSSync is active | |
| 409 (0x199) | EDSSync is deactivated | |
| 410 (0x19A) | EDSSync device cannot be reached! | |
| 411 (0x19B) | ISONet priority | |

| Value | Measured value description Alarm message Operating message | Description |
|-------------|--|-------------|
| 412 (0x19C) | Insulation measurement | |
| 413 (0x19D) | The ISOloop configuration is not consistent! | |
| 414 (0x19E) | The ISOloop configuration has not been found! | |
| 415 (0x19F) | Distribution of ISOloop configuration failed! | |
| 416 (0x1A0) | The ISOloop configuration is faulty! | |
| 417 (0x1A1) | ISOloop active | |
| 418 (0x1A2) | ISOloop is deactivated | |
| 419 (0x1A3) | ISOloop device not reachable! | |
| 420 (0x1A4) | RMS residual current | |
| 421 (0x1A5) | changeover period | |
| 422 (0x1A6) | EDSsync: No active ISOMETER! | |
| 423 (0x1A7) | Set up group | |
| 424 (0x1A8) | Not available | |
| 425 (0x1A9) | Wrong configuration | |
| 426 (0x1AA) | Estimated insulation value | |
| 427 (0x1AB) | Approximate insulation value | |
| 428 (0x1AC) | Too many EDSsync participants! | |
| 429 (0x1AD) | Insulation fault R(an) 1 | |
| 430 (0x1AE) | Insulation fault R(an) 2 | |

To convert parameter data, data type descriptions are required. Text representation is not necessary in this case.

Data type descriptions

| Value | Description of parameters |
|--------------|--|
| 1023 (0x3FF) | Parameter/measured value invalid. The menu item for this parameter is not displayed |
| 1022 (0x3FE) | No measured value/no message |
| 1021 (0x3FD) | Measured value/parameter inactive |
| 1020 (0x3FC) | Measured value/parameter only temporarily inactive (e.g. during the transfer of a new parameter). Display in the menu "...". |
| 1019 (0x3FB) | Parameter/measured value (value) unit not displayed |
| 1018 (0x3FA) | Parameter (code selection menu) unit not displayed |

| Value | Description of parameters |
|--------------|---|
| 1017 (0x3F9) | String max. 18 characters (e.g. device type, device variant, ...) |
| 1016 (0x3F8) | Reserved |
| 1015 (0x3F7) | Time |
| 1014 (0x3F6) | Date day |
| 1013 (0x3F5) | Date month |
| 1012 (0x3F4) | Date year |
| 1011 (0x3F3) | Register address (unit not displayed) |
| 1010 (0x3F2) | Time |
| 1009 (0x3F1) | Multiplication [*] |
| 1008 (0x3F0) | Division [/] |
| 1007 (0x3EF) | Baud rate |


7.7 Modbus control commands

Commands can be sent to BMS devices by an external application (e.g. a visualisation software).

This functionality can be activated or deactivated via the web user interface.

7.7.1 Writing to registers

- Use function code **0x10** (Preset Multiple Registers) for writing.
- If no BMS channel number is required, enter the value "0" (zero) in the corresponding register.
- Always set all four registers (word 0xFC00...0xFC03) at the same time. This statement also applies if individual registers remain unchanged.
- If no other subsystem is available, enter value "1" in this register.
- If a BMS channel number is not required, enter value "0" (zero) in this register

 *Control commands can also be generated in the menu **Service > Modbus > Modbus control commands**.*

7.7.2 Reading registers

Use function code **0x03** "Read Input Registers" to read.

Possible response in "Status" register

| | | |
|---|-------|--|
| 0 | Busy | Processing command. |
| 1 | Error | An error has occurred. |
| 2 | Ready | Command has been processed successfully. |

7.7.3 Control commands for the BMS bus

7.7.4 Modbus example for control commands

Example: Changeover of ATICS to line 1

The COMTRAXX® device has the address 1 in subsystem 1. An ATICS of internal address 3 is to be changed over to line 1.

Modbus control command

00 02 00 00 00 0F 01 10 FC 00 00 04 08 00 01 00 03 00 00 00 05

| | |
|-------|--|
| 00 02 | Transaction ID (is generated automatically) |
| 00 00 | Protocol ID |
| 00 0F | Length |
| 10 | Modbus function code 0x10 (write multiple registers) |
| FC 00 | Start register |
| 00 04 | Number of registers |
| 08 | Length of the data |
| 00 01 | |
| 00 03 | Value 2 (internal address: ATICS address 3) |
| 00 00 | Value 3 (channel address: always has to be 0) |
| 00 05 | Value 4 (command) |

Modbus response

00 02 00 00 00 06 01 10 FC 00 00 04

| | |
|-------|--|
| 00 02 | Transaction ID (is generated automatically) |
| 00 00 | Protocol ID |
| 00 06 | Length |
| 10 | Modbus function code 0x10 (write multiple registers) |
| FC 00 | Start register |
| 00 04 | Number of registers |

8 Modbus RTU Slave



Support tools that provide comprehensive information about Modbus can be found in the web user interface at **Tools > Service > Modbus RTU**

- Generate control commands for BMS
- Display information on all available Modbus registers.
- Generate Modbus documentation of all available Modbus registers of the connected devices.

These support tools are only active when the Modbus RTU interface is operated as a slave.

The Modbus RTU interface can be operated in master or slave mode.

- In **master mode**, device information is integrated into the COMTRAXX® system.
- In **slave mode**, the measured values and alarm states of the connected BMS devices are provided.

The detailed Modbus register data and all other information is presented in the support tools listed above.

Configuration of the Modbus-RTU interface

The configuration of the Modbus RTU interface takes place in the menu of the COMTRAXX® device under **Menu > Settings > Interface > Modbus**.

- Configure the mode of the Modbus RTU interface on the COMTRAXX® device (Factory setting: Master).
- If "Slave" is selected, the following parameters must be set:
 - The COMTRAXX® device must be assigned its own address. It can then be reached under this address via Modbus RTU.
 - "Send control commands" can be activated. In this way, control commands can be sent to BMS devices (factory setting: Off).

9 SNMP

9.1 Data access using SNMP

The COMTRAXX® device makes all measured values of the Bender system available via the SNMP interface. The SNMP versions V1, V2c and V3 are supported. The trap function can also be used. When an event occurs in the system, a message is automatically generated and sent to the SNMP manager. Up to 3 receivers can be configured.

9.2 Device assignment for SNMP

To use the SNMP function "Traps" or the individual texts from the COMTRAXX® application, the Bender MIB V2 must be used. It provides these functions. In addition, it is necessary to generate a device assignment for the SNMP image. There, the address of the device on the SNMP side is defined. This can be done automatically or configured individually.


The configuration is done at  > **Device management** > **Device assignment** > **SNMP**. There, the MIB files are also available for download.

10 MQTT

10.1 Data access via MQTT


The COMTRAXX® device provides all measured values from the Bender system on the MQTT interface. The "Quality of Service" levels (QoS) 0...2 are supported.

10.2 Measured value assignment for MQTT

The MQTT measured value assignments are configured under  **Tools > Device management > Device mapping > MQTT**. Up to 255 measured values can be selected. The measured values and their properties can be output individually as a topic or summarised in a JSON structure.

10.3 Connection settings

Device >  Menu > Settings > Interface > MQTT

| Menu item | Setting range | | Remarks |
|-------------------------|---------------------------------|-----------------------------|--|
| Aktiviere | off/on | | |
| IP address | xxx.xxx.xxx.xxx | | |
| Port | 1...65535 | | |
| Repetition interval | off | | Period after which all values are sent, even if there has been no change. Factory setting: off |
| | on | 15, 30, 60 minutes, 24 h | |
| Status | disconnected connected | | |
| Client-ID | xxx | | Individual MQTT client ID |
| QoS level ¹⁾ | 0...2 | | 0 = At most once 1 = At least once 2 = Exactly once |
| Export language | deutsch, english, francais | | Texts for measured value descriptions |
| Authentication | off | | |
| | on | User Password | |
| TLS | off | | |
| | on | Managing MQTT certificates |  > Service > Certifikate settings |
| | | Use uploaded CA certificate | off/on (format: *.pem) |
| | Use uploaded client certificate | off/on (format *.pem) | |

| Menu item | Setting range | | Remarks |
|-----------|---------------|--------------|---------|
| Will | off | | |
| | on | Will Retain | |
| | | Will Topic | |
| | | Will Message | |

1) QoS (Quality of Service)

0: Publisher sends the message once. No response is expected from the broker ("fire and forget").

1: Publisher sends the message once and repeats the delivery until an acknowledgement or the command to end the message is received from the broker ("acknowledged delivery").

2: Two-level acknowledgement of delivery The publisher only sends the message once a handshake has taken place with the broker. The broker confirms delivery of the message ("assured delivery").

11 Troubleshooting

11.1 Malfunctions

If the device causes malfunctions in the connected networks, please refer to this manual.

11.1.1 What should be checked?

11.1.2 Frequently asked questions

How do I access the device if the address data are unknown?

1. Connect the device directly to a PC using a patch cable
2. Activate the DHCP function on the PC.
3. Wait around one minute.
4. Now set the new address data.

Frequently asked questions on the Internet

FAQs on many Bender devices can be found at:

["www.bender.de/en/ > Service & Support > Fast assistance"](http://www.bender.de/en/>Service%20%26amp;Support%20>Fast%20assistance)

11.2 Maintenance, Cleaning

Maintenance

The device does not contain any parts that require maintenance.

12 Technical data

12.1 Tabular data

()* = Factory setting

Insulation coordination in acc. with IEC 60664-1/IEC 60664-3

| | |
|---|---|
| Rated voltage | AC 50 V |
| Overtoltage category | II |
| Pollution degree | 2 |
| Protective separation (reinforced insulation) between | (A1/+, A2/-) - [(X1), (X2), (X3), (X5)] |

i Overtoltage category II and pollution degree 2 are related to the **relay contacts**. Further insulation coordination takes place based on functional separation.

Supply voltage

| | |
|---|--------------|
| Connections | A1/+, A2/- |
| Supply voltage U_s | DC 24 V |
| Range U_s | DC 18...30 V |
| Protection class Power supply unit | 2 or 3 |
| Permissible ripple | 5 % |
| Typical power consumption | ≤ 3.5 W |
| Maximum power consumption | ≤ 10.5 W |
| Inrush current (< 5 ms) | < 1.5 A |
| Maximum cable length when supplied via B95061210 (24 V DC power supply unit 1.75 A) | |
| 0.28 mm ² | 75 m |
| 0.5 mm ² | 130 m |
| 0.75 mm ² | 200 m |
| 1.5 mm ² | 400 m |
| 2.5 mm ² | 650 m |

Indications

| | |
|--------------|---------------------------------|
| LEDs | |
| ON | Operation indicator |
| ETHERNET 1/2 | Data traffic ETH1...2 |
| NFC | <i>In preparation</i> |
| RS485 1 | Data traffic RS-485 interface 1 |
| RS485 2 | Data traffic RS-485 interface 2 |

Memory

| | |
|--|--|
| Number of data points for "third-party devices" on the Modbus TCP and Modbus RTU | 50 |
| Individual texts (function module B) | Unlimited number of texts each with 100 characters |
| E-mail configurations and device failure monitoring (function module B) | Max. 250 entries |
| Number of data loggers (function module B) | 30 |
| Number of data points per data logger (function module B) | 10,000 |
| Number of entries in the history memory (function module B) | 20,000 |

Visualisation (Function module C)

| | |
|-----------------------|-----------|
| Number of dashboards | 50 |
| Background image size | Max. 3 MB |

Interfaces

RJ45 (X6...7)

Ethernet

| | |
|--|---|
| Connection | 2 x RJ45 |
| Cable | Shielded, min. Cat. 5 |
| Cable length | < 100 m |
| Data rate | 10/100/1000 MBit/s, autodetect |
| HTTP mode | HTTP/HTTPS (HTTP)* |
| DHCP | on/off (off)* |
| t_{off} (DHCP) | 5...60 s (30 s)* |
| IP address | |
| First IP address: freely configurable nnn.nnn.nnn.nnn | ETH1 (192.168.0.254)* ETH2 (10.0.0.254)* |
| Second fixed IP address (e.g. for commissioning) | ETH1: 169.254.0.1 ETH2: 169.254.0.2 |
| Netmask | nnn.nnn.nnn.nnn (255.255.0.0)* |
| Protocols (depending on the selected function module) | TCP/IP, Modbus TCP, Modbus RTU, MQTT, DHCP, SMTP, NTP |

BCOM

| | |
|------------------------|--------------|
| Interface/protocol | ETH1 / BCOM |
| BCOM system name | (SYSTEM)* |
| BCOM subsystem address | 1...255 (1)* |
| BCOM device address | 0...255 (0)* |

Modbus TCP

| | |
|---|--|
| Interface/protocol | ETH1...2 / Modbus TCP |
| Client operating mode | Client for assigned Bender devices and "third-party devices" |
| Server operating mode | Server for access to process image and for Modbus control commands |
| Parallel data access from different clients | max. 25 |
| Bender Modbus image | V1, V2 (V2)* |

SNMP

| | |
|--------------------|--|
| Interface/protocol | ETH1...2 / SNMP |
| Versions | 1, 2c, 3 |
| Supported devices | Queries to all devices (channels) possible |
| Trap support | Yes |

MQTT

| | |
|--|---------------------------------------|
| Interface/protocol | ETH1...2 / MQTT |
| Operating mode | Publisher (provides data for brokers) |
| Slots for transferring measured values | 255 |

RS-485 (X5)

BMS bus (internal)

| | |
|---------------------|---|
| Interface/protocol | RS-485/BMS internal |
| Operating mode | Master/slave (master)* |
| Baud rate | 9.6 kBaud |
| Cable length | ≤ 1200 m |
| Cable | Shielded, one end of shield connected to PE |
| Cable recommended | CAT6/CAT7 min. AWG23 |
| Cable alternatively | Twisted pair, J-Y (St) Y min. 2x0.8 |
| Connection | X5 (RS2A, RS2B) |

BMS bus (internal)

| | |
|----------------------------------|---|
| Connection type | See connection "Push-wire terminal B" |
| Terminating resistor | 120 Ω (0,25 W), can be switched on via COMTRAXX® software |
| Device address, internal BMS bus | 1...150 (1)* |

Modbus RTU

| | |
|--------------------------------------|---|
| Interface/protocol | RS-485/Modbus RTU |
| Operating mode | Master/slave (master)* |
| Baud rate | 9.6...57.6 kBaud |
| Cable length | Depending on the baud rate |
| 9.6 kBaud | < 1200 m |
| 19.2 kBaud | < 1000 m |
| 38.4 kBaud | < 800 m |
| 57.6 kBaud | < 800 m |
| Cable | Shielded, one end of shield connected to PE |
| Cable recommended | CAT6/CAT7 min. AWG23 |
| Cable alternatively | Twisted pair, J-Y (St) Y min. 2x0.8 |
| Connection | X5 (RS1A, RS1B) |
| Connection type | See connection "Push-wire terminal B" |
| Terminating resistor | 120 Ω (0.25 W), can be switched on via COMTRAXX® software |
| Supported Modbus RTU slave addresses | 2...247 |

USB (X8...9)

| | |
|-----------------|----------------------------|
| Number | 2 |
| Connection type | USB-C |
| Operating mode | USB-2.0-Host (5 V, 500 mA) |
| Data rate | 480 Mbit/s |
| Cable length | < 3 m |

Digital inputs (X4)

| | |
|--|--|
| Number | 8 |
| Galvanic separation | Yes |
| Maximum cable length | < 1000 m |
| Operating mode | Selectable for each input: high-active or low-active |
| Factory setting | high-active |
| Voltage range (high) | DC 12...30 V |
| Voltage range (low) | DC 0...2 V |
| Max. current per channel (at AC/DC 30 V) | 8 mA |
| Connection plug-in terminal | (1-1) (2-2) (3-3) ... (8-8) |

Switching elements (X1...3)

| | |
|--|--|
| For UL applications: Intended use | General purpose relay |
| Number of changeover contacts | 3 |
| Voltage connected to the relay | SELV |
| Rated operating voltage | DC 24 V |
| Rated operating current | 8 A |
| Operating principle | N/C operation N/O operation |
| Function | Programmable |
| Electrical endurance under rated operating conditions | 10,000 operating cycles |
| Minimum contact load (reference specification of the relay manufacturer) | 10 mA / 12 V DC |
| Connection plug-in terminal | K1 NO K1 COM K1 NC K2 NO K2 COM K2 NC K3 NO K3 COM K3 NC |

Overview: Used ports

| | |
|--------|------------------|
| 53 | DNS (UDP/TCP) |
| 67, 68 | DHCP (UDP) |
| 80 | HTTP (TCP) |
| 123 | NTP (UDP) |
| 161 | SNMP (UDP) |
| 162 | SNMP TRAPS (UDP) |
| 443 | HTTPS (TCP) |

Overview: Used ports

| | |
|-------|--------------|
| 502 | MODBUS (TCP) |
| 4840 | OPCUA (TCP) |
| 5353 | MDNS (UDP) |
| 48862 | BCOM (UDP) |

Environment / EMC

| | |
|-----------------------------|---|
| EMC | EN 61326-1 Table 1 - basic electromagnetic environment EN 61326-1 Table 2 - industrial electromagnetic environment IEC 62974-1:2024-08 Ed. 2.0 Clause 6.7, 7.3 Class 1 |
| Electromagnetic environment | Other than residential environments, CISPR 11:2015/ AMD1:2016/AMD2:2019, Group 1, Class A Residential environments, CISPR 11:2015/AMD1:2016/ AMD2:2019, Group 1, Class B |

Ambient temperatures

| | |
|-----------------------|---------------|
| Operating temperature | -25...+55 °C |
| Transport | -40...+85 °C |
| Long-term storage | -25...+70 °C |
| Operating altitude | ≤ 2000 m AMSL |

Classification of climatic conditions acc. to IEC 60721

| | |
|-----------------------------------|------|
| Stationary use (IEC 60721-3-3) | 3K22 |
| Transport (IEC 60721-3-2) | 2K11 |
| Long-term storage (IEC 60721-3-1) | 1K22 |

Mechanical conditions acc. to IEC 60721

| | |
|-----------------------------------|------|
| Stationary use (IEC 60721-3-3) | 3M11 |
| Transport (IEC 60721-3-2) | 2M4 |
| Long-term storage (IEC 60721-3-1) | 1M12 |

Device connections
Push-wire terminal A (A1/+, A2/-)

| | |
|---|----------------------------|
| Conductor sizes | AWG 24-12 |
| Stripping length | 10 mm |
| rigid/flexible | 0.2...2.5 mm ² |
| flexible with ferrule with/without plastic sleeve | 0.25...2.5 mm ² |

Push-wire terminal A (A1/+, A2/-)

| | |
|--|---------------------------|
| Multiple conductor, flexible with TWIN ferrule with plastic sleeve | 0.5...1.5 mm ² |
|--|---------------------------|

Push-wire terminal B (X1, X2, X3, X4, X5)

| | |
|--|---------------------------|
| Conductor sizes | AWG 24-16 |
| Stripping length | 10 mm |
| rigid/flexible | 0.2...1.5 mm ² |
| flexible with ferrule without plastic sleeve | 0.2...1.5 mm ² |
| flexible with ferrule with plastic sleeve | 0.2...1.5 mm ² |

Other

| | |
|---|--|
| Operating mode | Continuous operation |
| Mounting position | Front-orientated, air must pass through cooling slots vertically |
| Degree of protection, internal components (IEC 60529) | IP30 |
| Degree of protection, terminals (IEC 60529) | IP20 |
| Snap-on mounting on a DIN rail | IEC 60715 |
| Screw mounting | 3 x M4 |
| Type of enclosure | J460 |
| Enclosure material | Polycarbonate |
| Flammability class | UL94V-0 |
| Dimensions (W x H x D) | 107.5 x 93 x 62.9 mm |
| Weight | ≤ 240 g |

()* = Factory setting

12.2 Standards, approvals and certifications



EU Declaration of Conformity

The full text of the EU Declaration of Conformity is available via:

https://www.bender.de/fileadmin/content/Products/CE/CEKO_EDGE500.pdf

12.3 Ordering information

Device

| Type | Application | Supply voltage U_S | Power consumption | Art. No. |
|-----------|---|----------------------|-------------------|-----------|
| EDGE500IP | <ul style="list-style-type: none"> Condition monitor with gateway functionality Integration and provision of Bender device data | DC 24 V | ≤ 3.5 W | B95061250 |

Function modules

| Function module (Software licence) | Function | Art. No. |
|------------------------------------|---|-----------|
| Function module A | Interfaces Modbus TCP / RTU: Voller Datenzugriff Modbus TCP / RTU Steuerbefehle BMS SNMP MQTT Modbus Fremdgeräte einbinden (2.000 Datenpunkte) | B75061030 |
| Function module B | Technical (Engineering) System overview Parameterisation Backups Documentation Customised texts E-mail notification Device failure monitoring History memory Data logger Virtual devices | B75061031 |
| Function module C | Visualisation Visualisation / Editor Alarm addresses / test addresses Customised system overview | B75061032 |

12.4 Document revision history

| Date | Document version | Valid from software version | State/Changes |
|---------|------------------|-----------------------------|----------------------|
| 04.2025 | 00 | 5.0 | First edition |
| 07.2025 | 01 | | Interface adjustment |



Bender GmbH & Co. KG

Londorfer Straße 65
35305 Grünberg
Germany

Tel.: +49 6401 807-0
info@bender.de
www.bender.de

All rights reserved.
Reprinting and duplicating only with
permission of the publisher.



© Bender GmbH & Co. KG, Germany
Subject to change!
The specified standards take into
account the edition valid until 07.2025
unless otherwise indicated.